POLITECNICO DI TORINO Repository ISTITUZIONALE

Investigation of Organolead Halide Perovskite Using Infrared Spectroscopy

Original

Investigation of Organolead Halide Perovskite Using Infrared Spectroscopy / Ma, Teng; Cagnoni, Matteo; Niwano, Michio. - ELETTRONICO. - 2014:(2014), pp. 2438-2438. (Intervento presentato al convegno 75th JSAP Autumn Meeting 2014 nel September 17, 2014 - September 20, 2014) [10.11470/jsapmeeting.2014.2.0_2438].

Availability: This version is available at: 11583/2985155 since: 2024-01-16T13:46:53Z

Publisher: Japan Society of Applied Physics

Published DOI:10.11470/jsapmeeting.2014.2.0_2438

Terms of use:

This article is made available under terms and conditions as specified in the corresponding bibliographic description in the repository

Publisher copyright

(Article begins on next page)

Investigation of organolead halide perovskite using infrared spectroscopy °Teng Ma, Matteo Cagnoni, Michio Niwano Laboratory for Nanoelectronics and Spintronics, RIEC, Tohoku University E-mail: mateng@riec.tohoku.ac.jp

In recent years, perovskite materials have shown their great potential in the area of organic/inorganic hybrid solar cells. Because of their high light absorbing coefficient and good charge transport properties, they can be used as a light absorber, a charge transporter, or both at the same time ^[1-3]. With these outstanding characteristics, the efficiency of perovskite solar cells has already surpassed 16% ^[4]. However, there are still several factors that hindered the perovskite solar cells from replacing the high-cost c-Si solar cells. One of the most important factors is the poor stability. It is suggested that the perovskite material can react with the H₂O in atmosphere and degrade the performance. Yet the detailed process of the degradation has not been investigated. In order to understand the mechanism of degradation and find effective method to obtain high stability of perovskite solar cells, we used infrared spectroscopy in the multi-intra-reflective setup (MIR-IRAS) to in-situ monitor structural changes in perovskite material.

In this work, the investigation of perovskite materials using MIR-IRAS in the mid-IR region is

demonstrated for the first time. The IR spectra of lead methylammonium (MA) tri-iodide (CH₃NH₃PbI₃) and blended halide (CH₃NH₃PbI_{3-x}Cl_x) perovskite before and after annealing was collected to identify the peak of entangled MA ion in the Pb-I (or Pb-I-Cl) network. Combining with the XRD and EDX results, we found that most of the Cl atoms in CH₃NH₃PbI_{3-x}Cl_x evaporated during the annealing process. The final product showed the same IR spectrum as that of tri-iodide perovskite as shown in Fig. 1. The results in this work will be used as a guideline to investigate the degrading mechanism of perovskite solar cells.

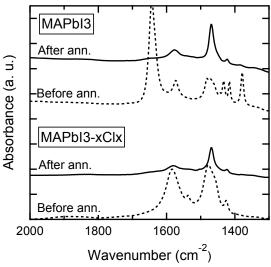


Fig. 1 The MIR-IRAS spectra of non-annealed (dot) and annealed (line) perovskite.

Reference

17a-PA2-27

- [1] A. Kojima, K. Teshima, Y. Shirai, and T. Miyasaka, J. Am. Chem. Soc., 131(17), 6050-1 (2009).
- [2] I. Chung, B. Lee, J. He, R. P. H. Chang and M. G. Kanatzidis, Nature, 485, 486 (2012).
- [3] M. Liu, M. B. Johnston, and H. J. Snaith, Nature, 501, 395 (2013).
- [4] S. Ryu, J. H. Noh, N. J. Jeon, Y. C. Kim, W. S. Yang, J. W. Seo and S. I. Seok, *Energy Environ. Sci.*, accepted manuscript (2014).