

Microstructural, mechanical and fatigue properties of Cobalt alloys

Original

Microstructural, mechanical and fatigue properties of Cobalt alloys / Scavino, Giorgio; Matteis, Paolo; Mortarino, GIOVANNI MARCO MARIA; Firrao, D.. - (2010).

Availability:

This version is available at: 11583/2458377 since:

Publisher:

Published

DOI:

Terms of use:

openAccess

This article is made available under terms and conditions as specified in the corresponding bibliographic description in the repository

Publisher copyright

(Article begins on next page)

Microstructural, Mechanical and Fatigue Properties of Cobalt Alloys

G. Scavino, P. Matteis, G.M.M. Mortarino, D. Firrao

Dip. Scienza dei Materiali ed Ingegneria Chimica
Politecnico di Torino

Introduction - General goals

- **reduction** of fuel consumption and pollutant emission
 - higher **efficiency** motor development
 - increase of **fuel injection pressure** in cylinders
 - higher **stresses** in injection system components



- inadequacy of steels → use of **cobalt based alloys** (Stellites) for components mechanically stressed at high temperature



- **literature about Co alloys** mainly concerned on wear and corrosion resistance at high temperature
- **few data about high temperature fatigue** available

Materials & specimens

Tensile and fatigue cylindrical (not notched) specimens, 8 mm diameter

- “stellite 6” type alloy produced by casting
- “stellite 6” type alloy produced by powder metallurgy + hipping

Experimental methods

Mechanical tests

- hardness and micro-hardness test at R.T.
- tensile tests at R.T., 250 or 500 °C
- pulsed traction fatigue tests ($R \approx 0$) up to $2 \cdot 10^6$ cycles at 250 or 500 °C

Crystallographic and micro-structural tests

- both on as received material, and after 250 or 500 °C treatments
- X ray diffraction (Co anode)
- optical and electronic metallography and EDS micro-analysis

Fractography

*Chemical composition of cast or HIP
stellite grade 6. (% wt.)*

CAST


Co	C	Cr	W	Ni	Si	Mn	Fe	V	Nb
bal.	1.19	25.54	5.21	1.99	1.56	0.69	0.85	0.028	0.034

HIP

Co	C	Cr	W	Ni	Si	Mn	Fe	V	Nb
bal.	1.48	27.21	4.78	0.30	1.21	0.21	0.44	0.021	0.002


Cast sample XRD Analyses (Brag-Brentano geometry, Co anode)

- Shallow and partially overlapped peaks (e.g. 40-65 ° range)
- Possible phases: Co_{CFC} , Co_{HCP} , $\text{Co}_{25}\text{Cr}_{25}\text{W}_8\text{C}_2$, Cr_7C_3 , Cr_{23}C_6 , Cr_3C_2 , $\text{Co}_3\text{W}_3\text{C}$, $\text{Co}_4\text{W}_2\text{C}$, $\text{Co}_6\text{W}_6\text{C}$, W_2C , Co_3W , Co_7W_6
- Probable prevalence of Co_{CFC} in respect to Co_{HCP}
- Possible phase evolution on heating at 250 or 500 °C

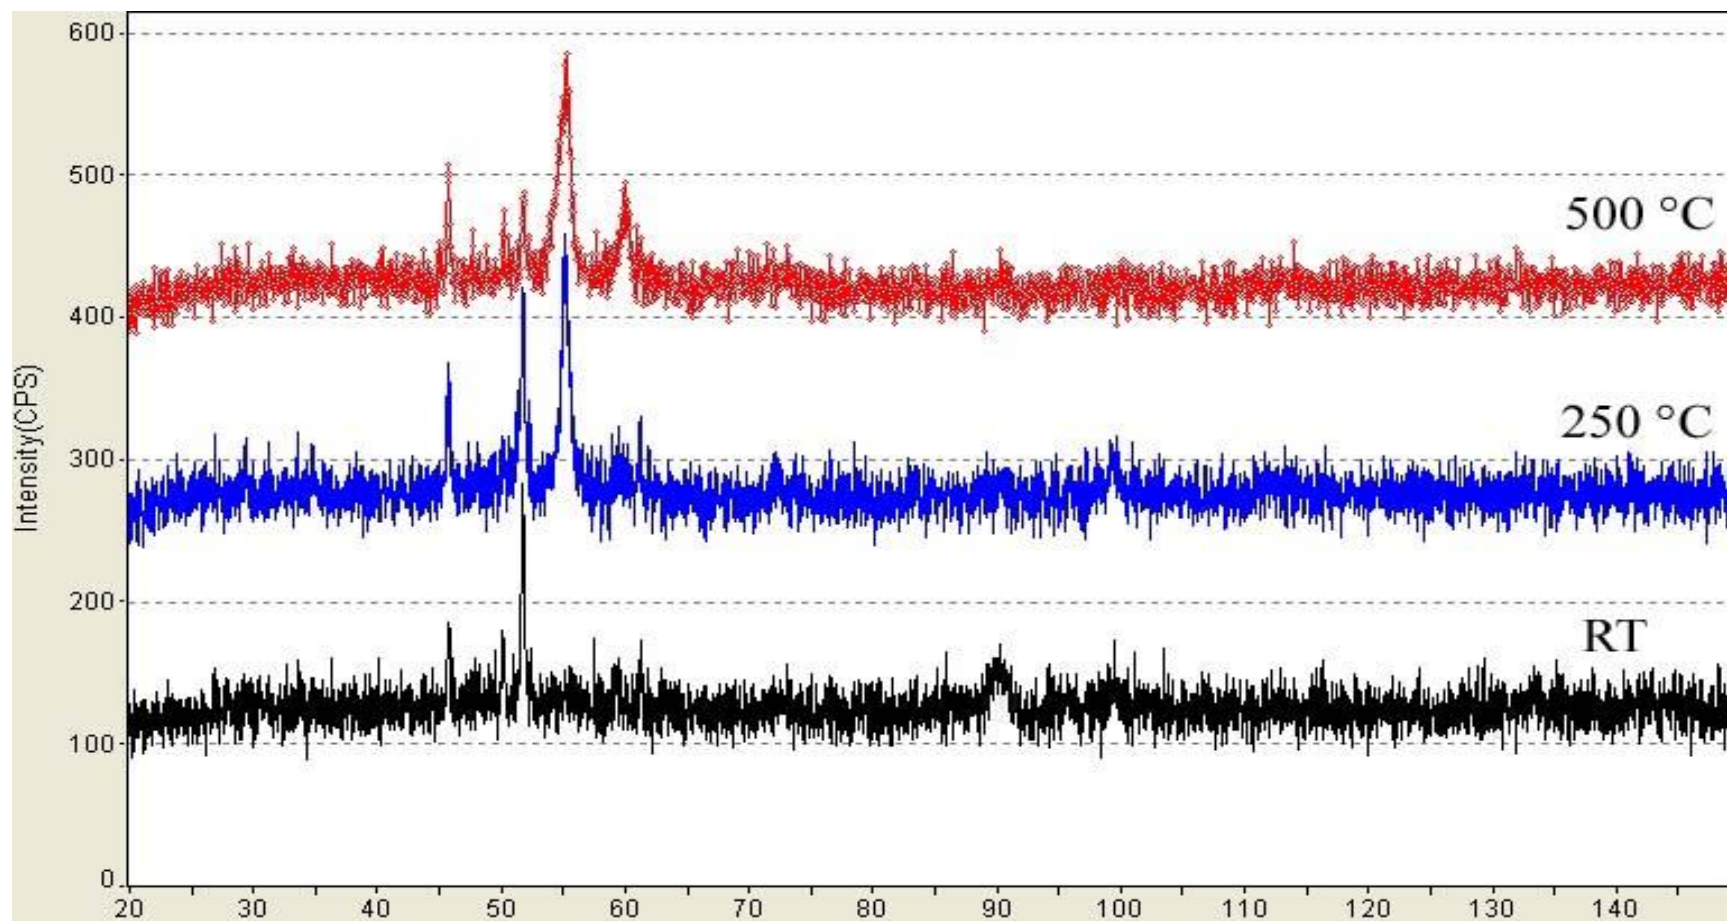


Hipped sample XRD Analyses (Brag-Brentano geometry, Co anode)

- Shallow and partially overlapped peaks (e.g. 40-65 ° range)
- Possible phases: Co_{CFC} , Co_{HCP} , $\text{Co}_{25}\text{Cr}_{25}\text{W}_8\text{C}_2$, Cr_7C_3 , Cr_{23}C_6 , Cr_3C_2 , $\text{Co}_3\text{W}_3\text{C}$, $\text{Co}_4\text{W}_2\text{C}$, $\text{Co}_6\text{W}_6\text{C}$, W_2C , Co_3W , Co_7W_6
- Probable prevalence of Co_{CFC} in respect to Co_{HCP}
- No phase evolution on heating at 250 or 500 °C

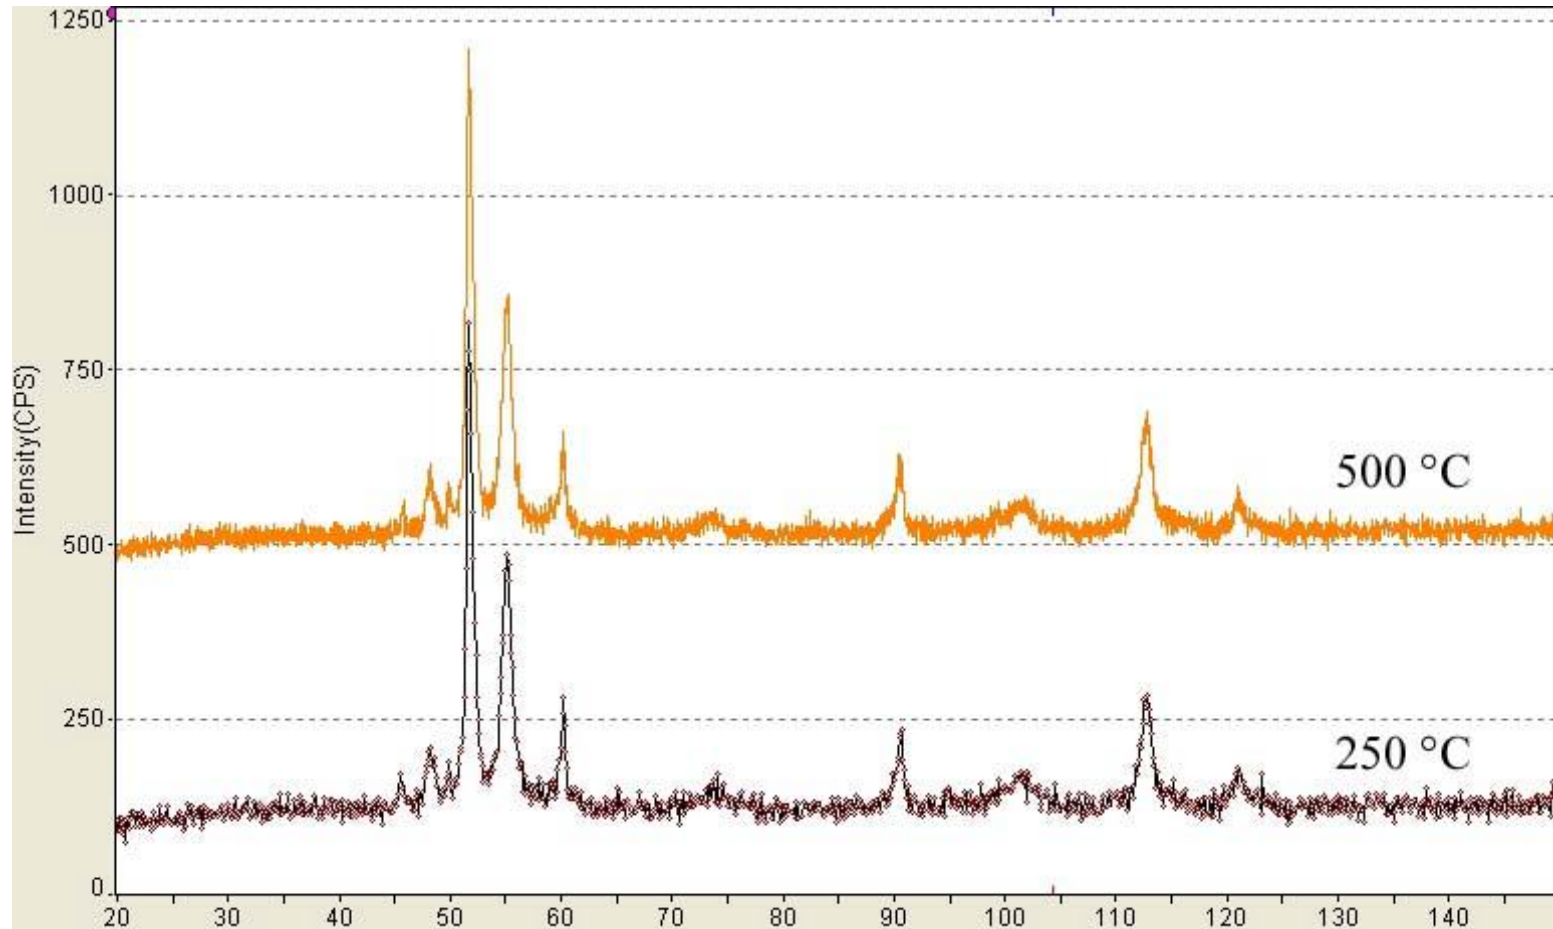

Cast samples micro-structure

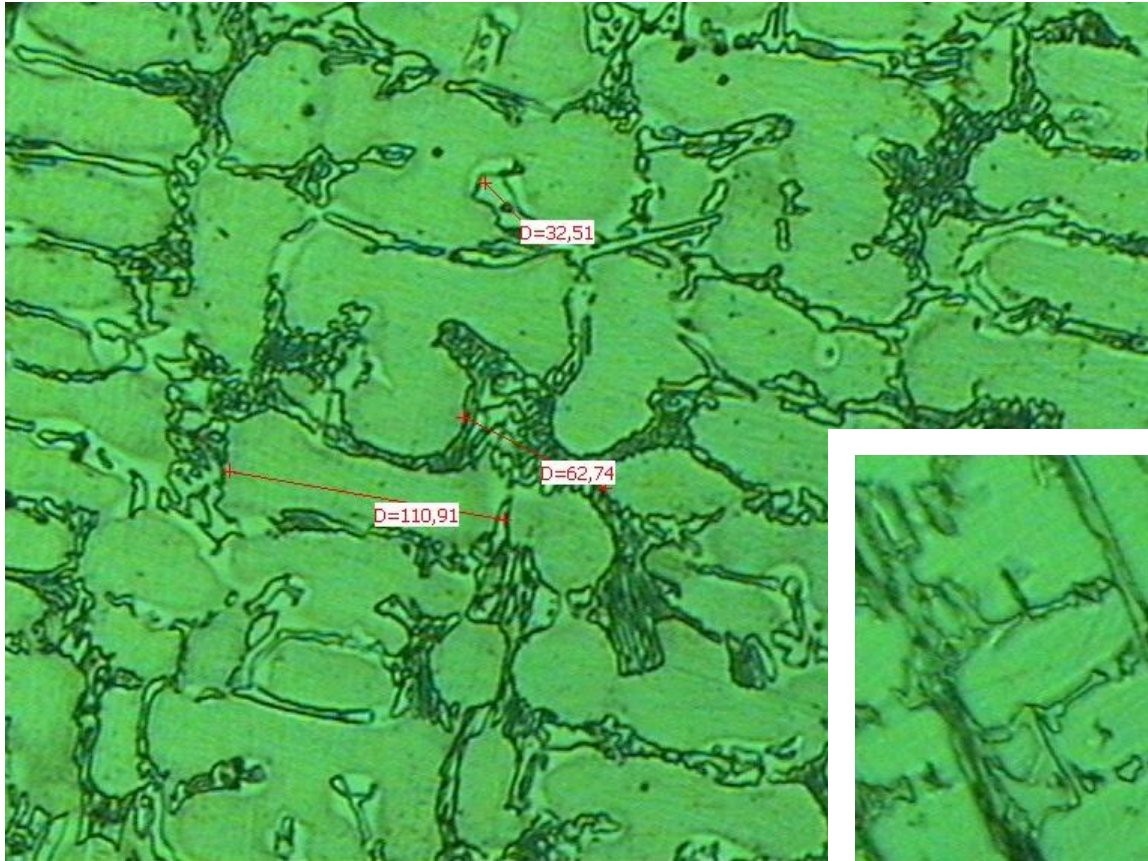


As received, 456 x 362 μm

No microstructural differences due to treatment at 250 and 500 °C are noticeable





Main primary dendrites

Inter-dendritic carbides (mainly lamellar form)

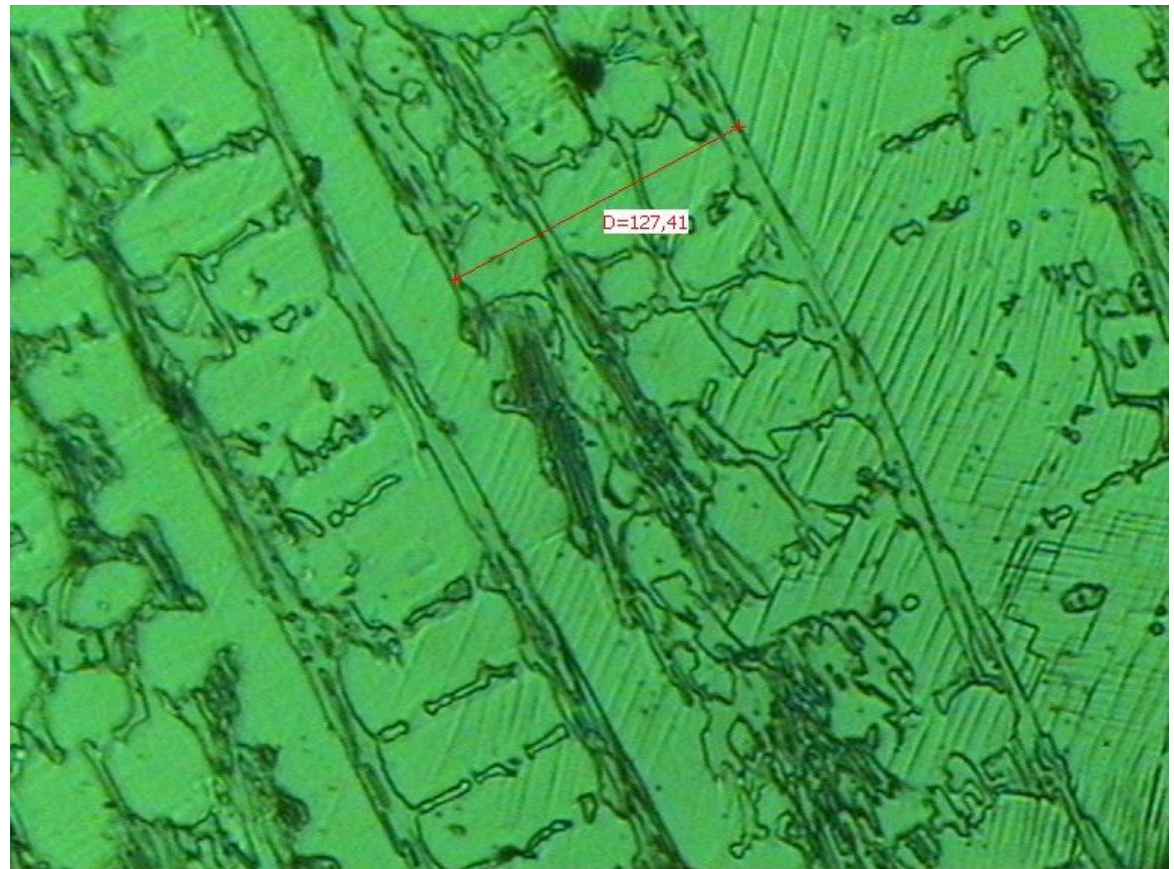

After treatment at 500 °C, 456 x 362 μm


Hipped sample microstructure

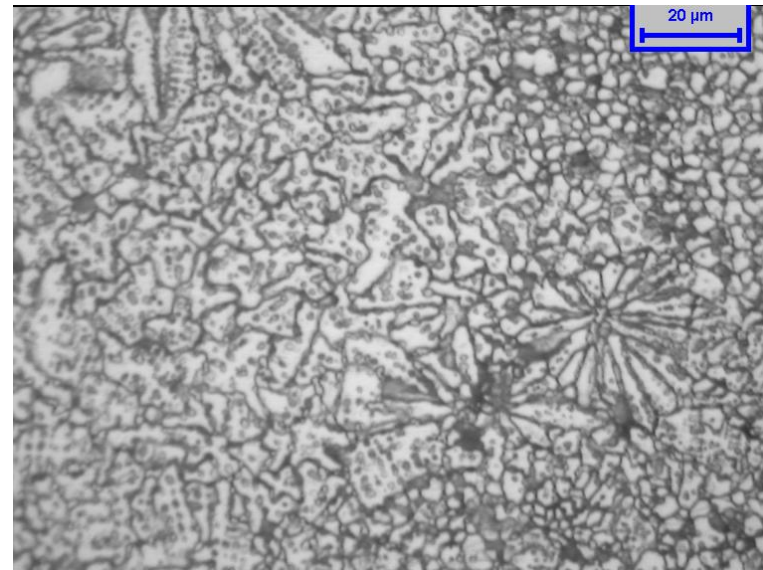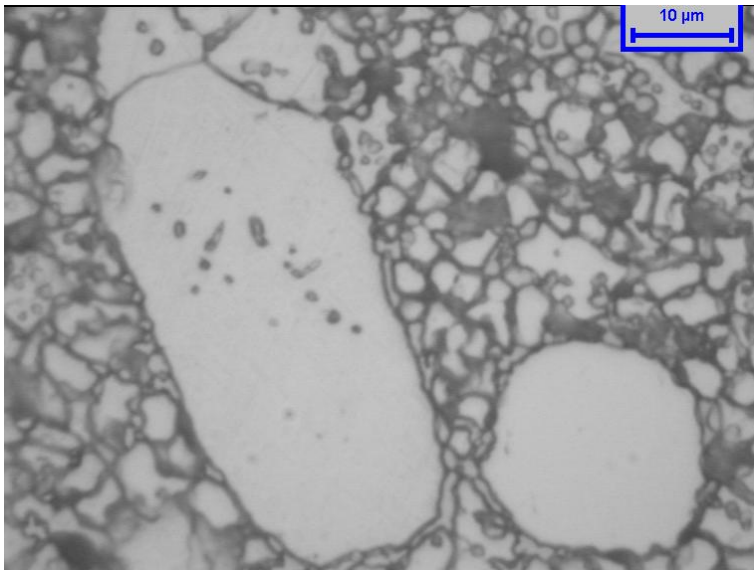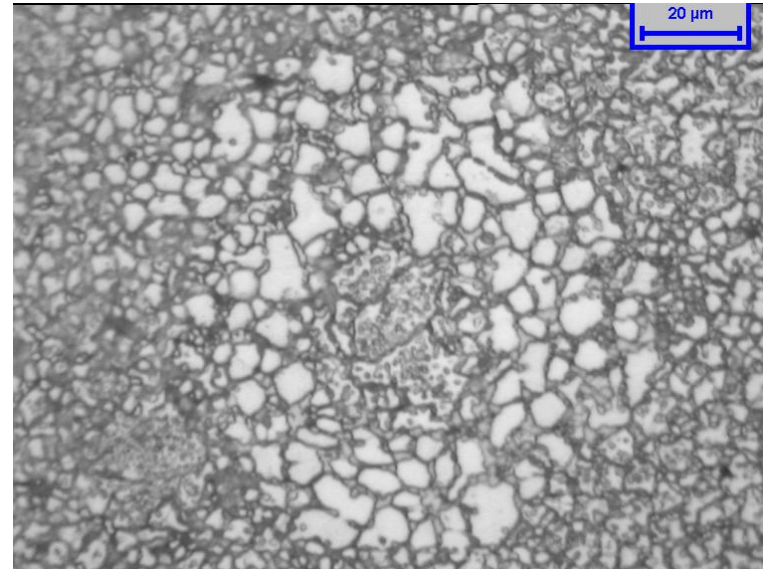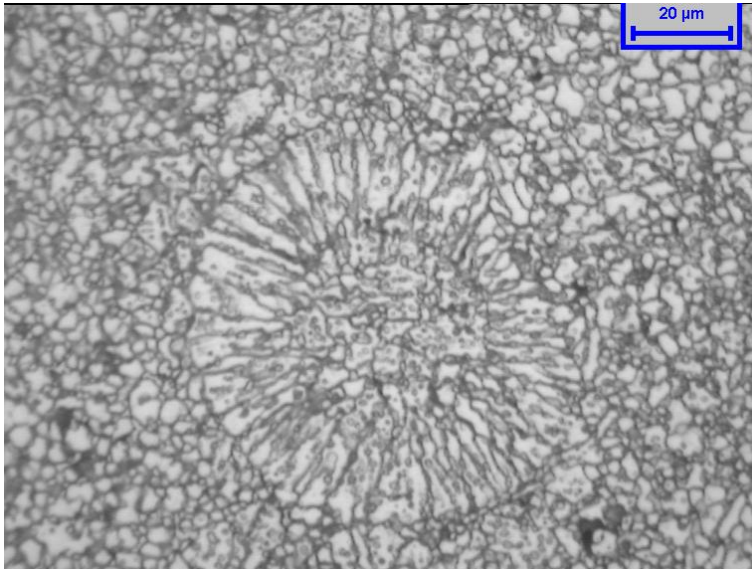

Co rich matrix, dispersed carbides, about 2 μm diameter. Grain size in the range of 5-40 μm with the most part in the range 5-10 μm .

Larger grains are richer in Co (EDS analysis).

Cast sample micro-analysis (EDS)

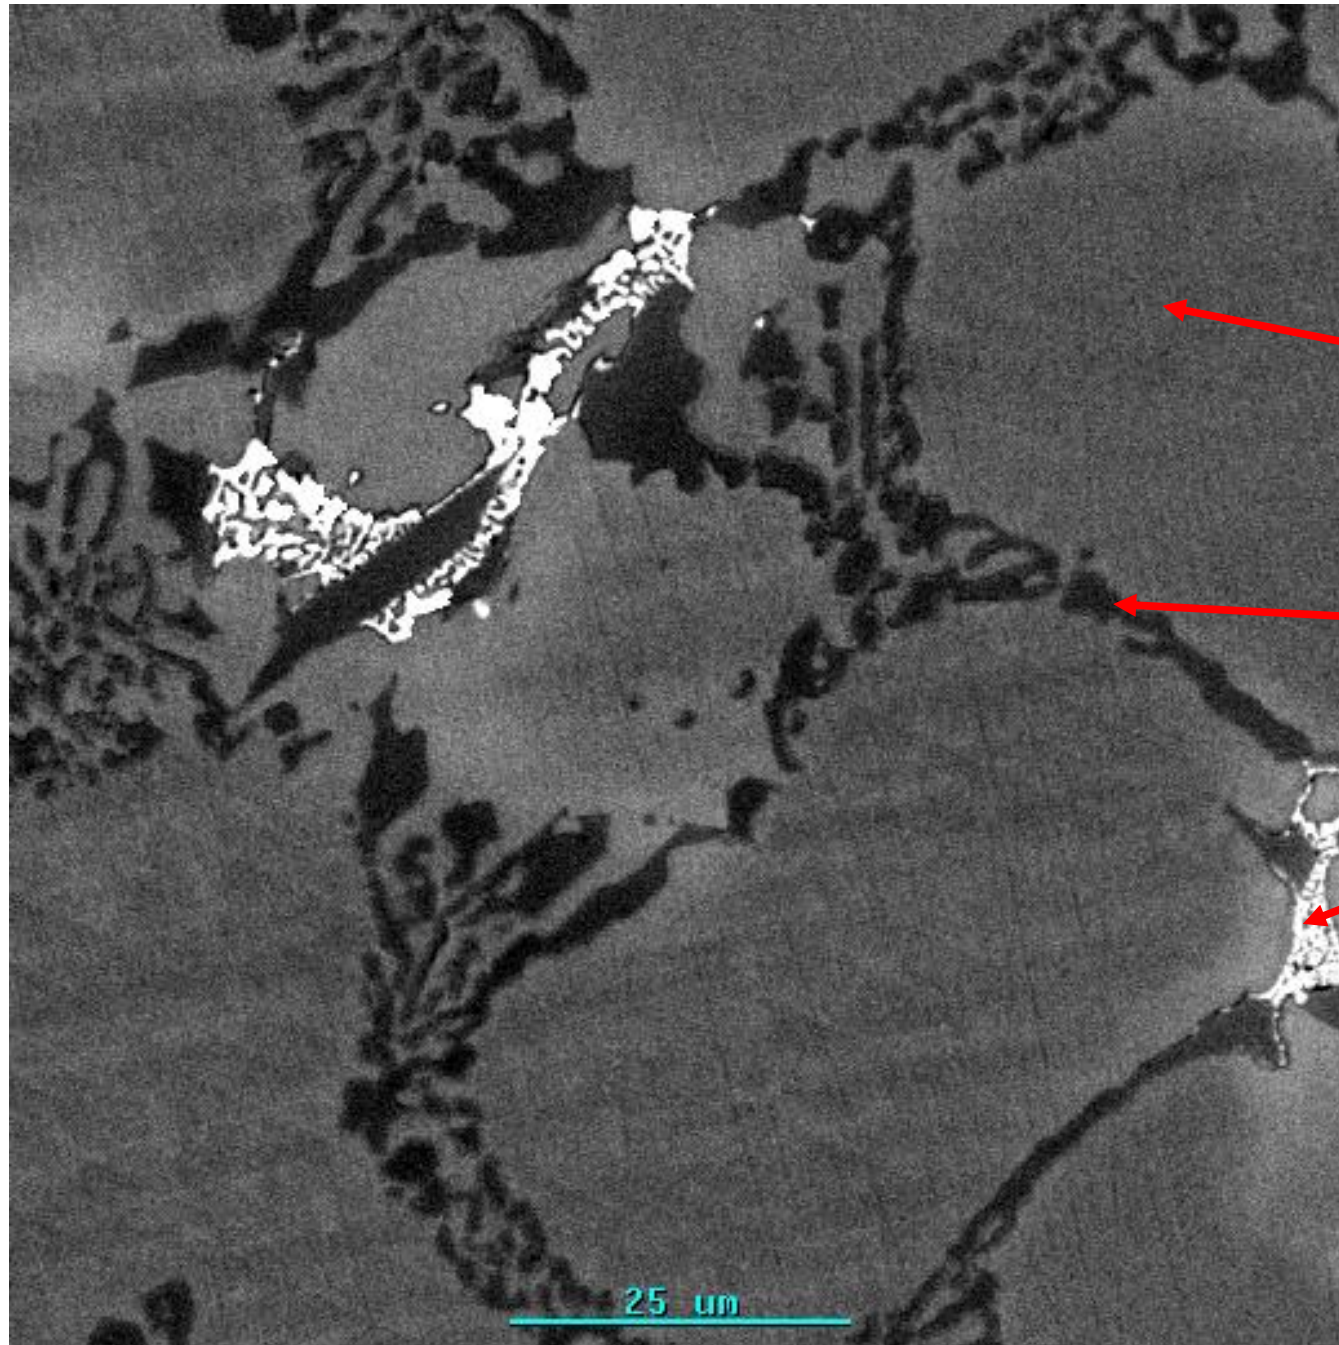

Metallic matrix

Cr	Co	W	Mo	Si
24	71	3.5	0.24	0.65

Cr rich carbides

Cr	Co	W	Mo
78	15	6.3	0.43

Co, W rich carbides

Cr	Co	W	Mo
21	47	29	2.7

**Back-scattered
electrons image**


Hardness and micro-hardness

Samples	HV 50	HV 0.05 Dendritic zones	HV 0.05 Carbides rich zones
Room temperature	370	400-430	530-1100
Heating at	395	390-410	550- 1000
Heating at	385	380-400	800-1100

low heat treatment effect on
hardness of matrix

Cast sample: scattered results on
precipitated carbide zone (hardness
indent large in respect to dimension
of carbides)


The hardness tests effected on the
transverse section of the **HIP**
samples reveal 660 HV for the 50 g
tests and 460 HV for the 50 kg
tests.

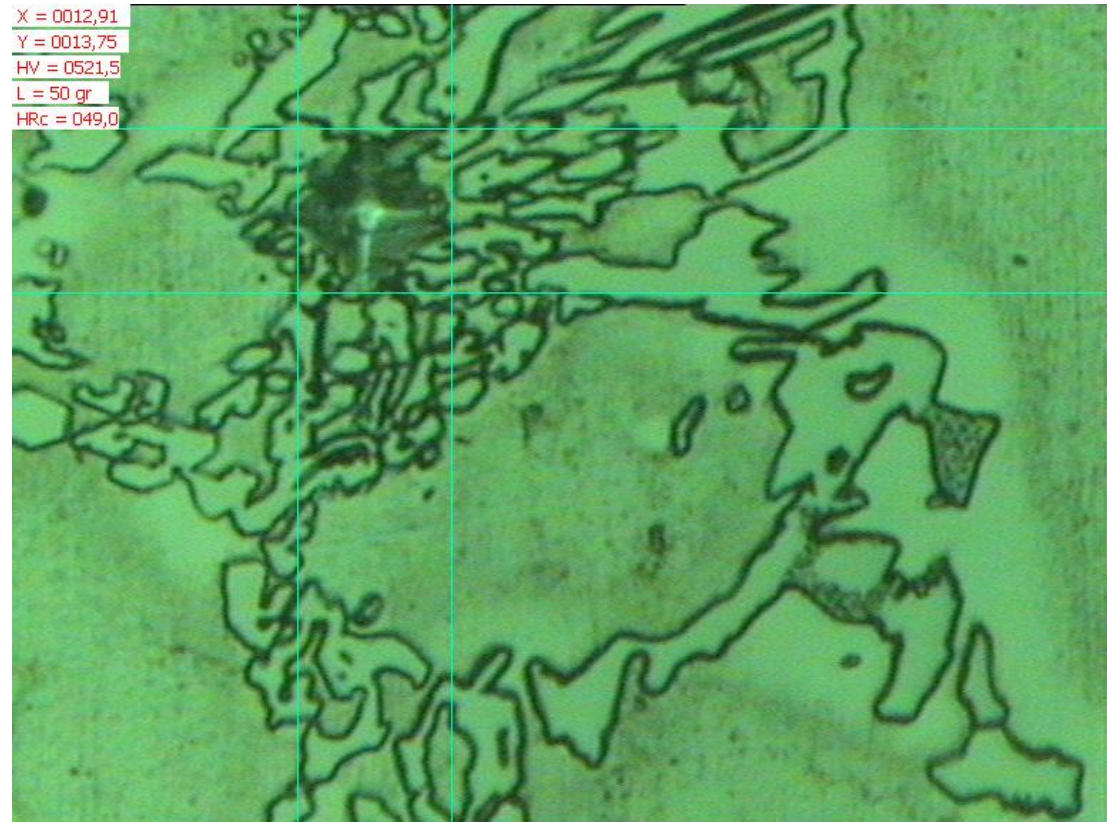

As received cast sample, 92 x 69 μm

Mechanical tests

Tensile test

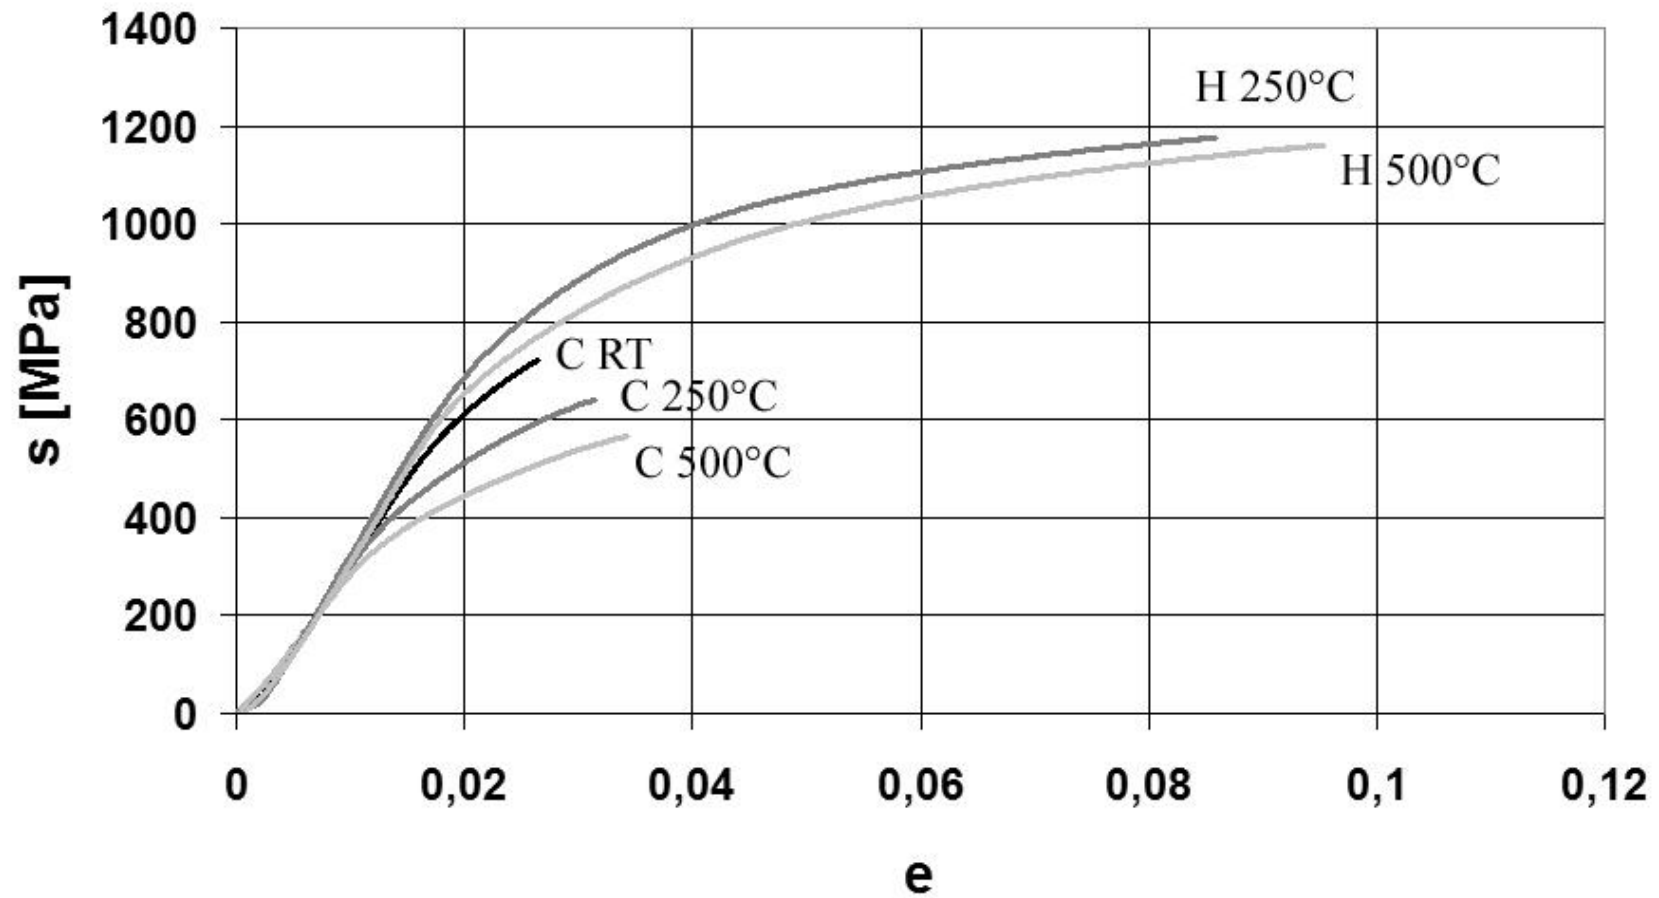

Mechanical tests

Fatigue


Fatigue tests:

- pulsed traction fatigue $R \approx 0$
- staircase method up to $2 \cdot 10^6$ cycles, 30 Hz, temperature 250 or 500 °C

Results:

- the highest fatigue resistance was observed for HIP samples
- there is a great difference in the behaviour of cast and hiped samples
- results obtained through 250 or 500 °C tests are similar but the best behaviour has been observed at the lower temperature
- under the maximum stress the fracture occurred after a greater cycle number for the samples tested at the lower temperature

Mechanical tests

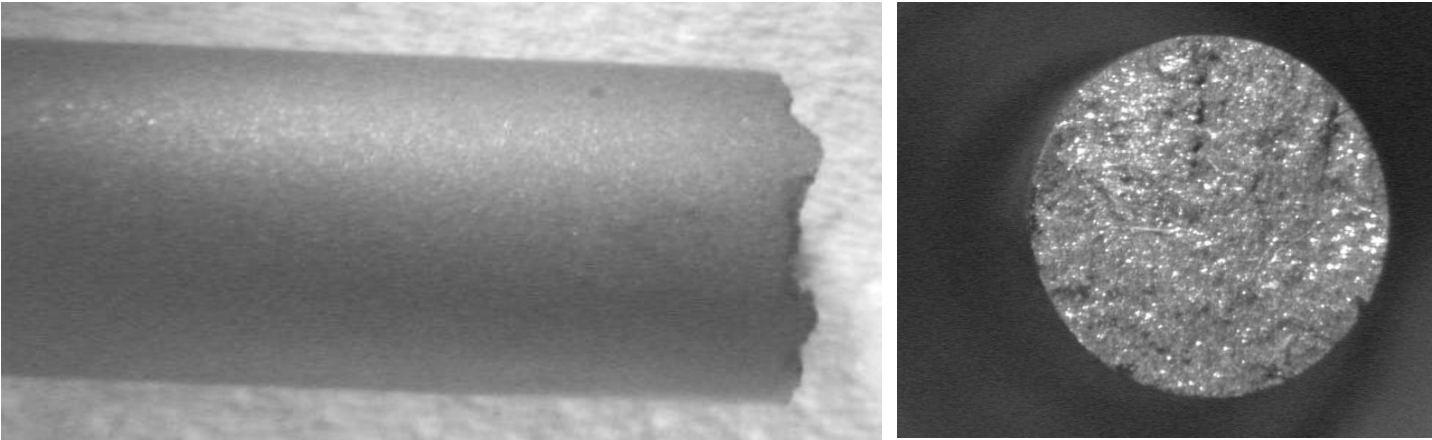


Cast tensile test sample (no necking).




Hipped tensile test sample (shear lips presence)


Fractography – cast sample tensile test fracture at 500 °C

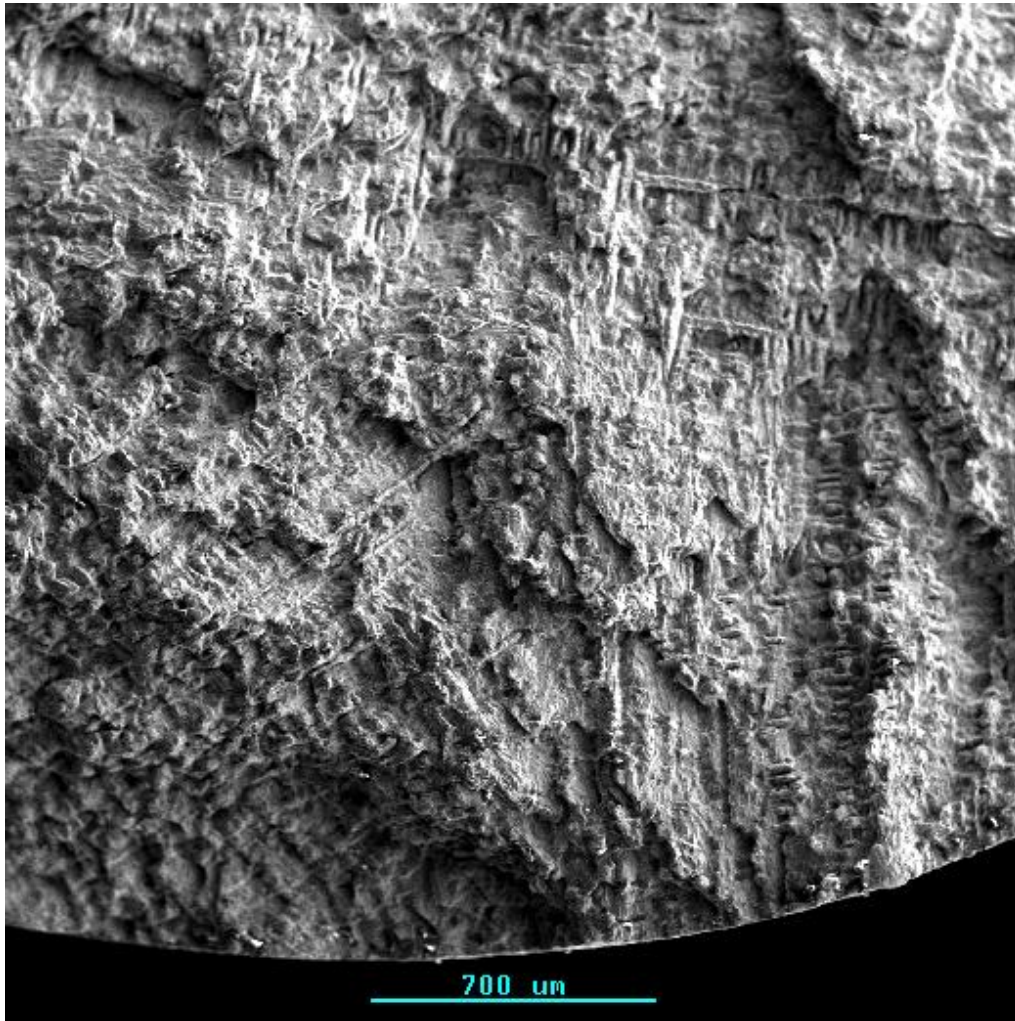


Mainly inter-dendritic fracture
and
trans-dendritic quasi-cleavage fracture

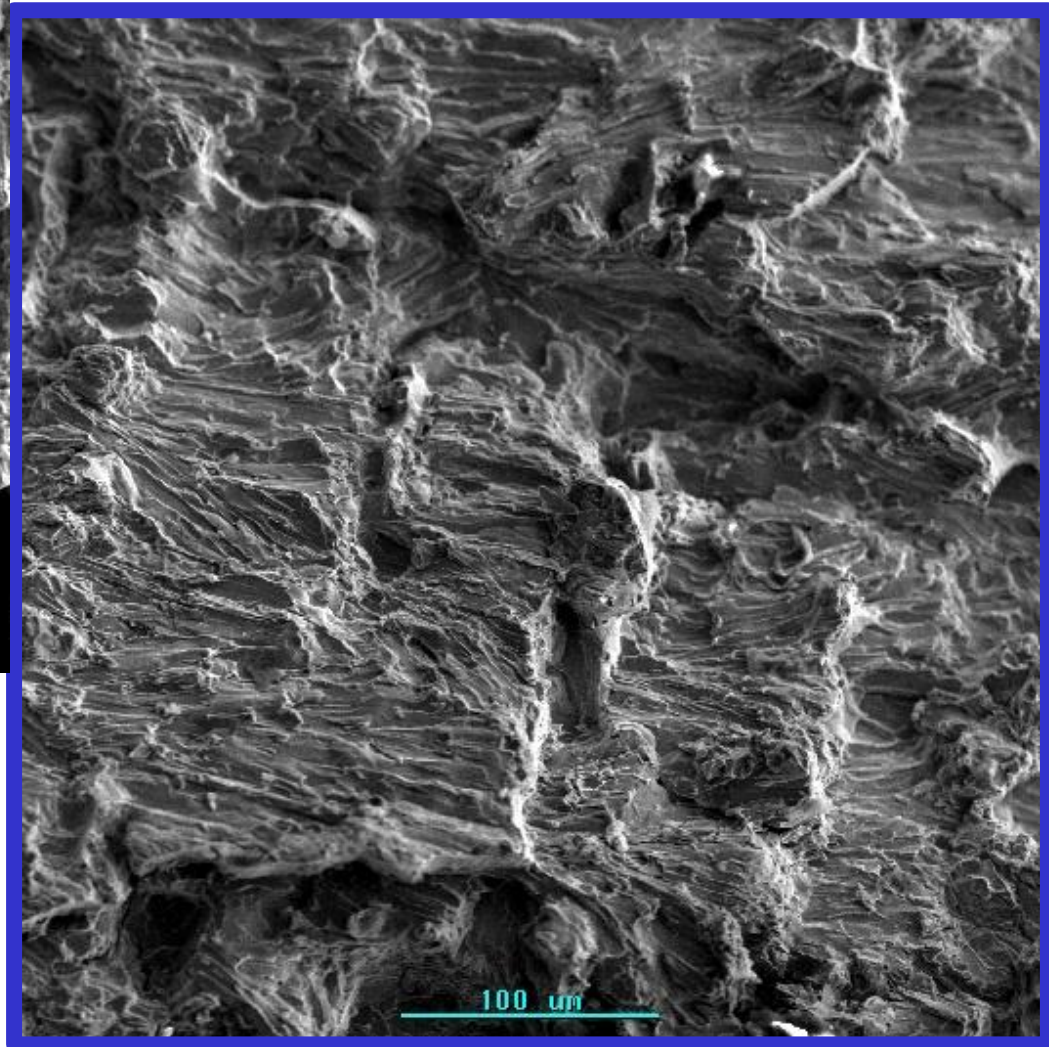


Fractography – cast sample fatigue test at 250 °C

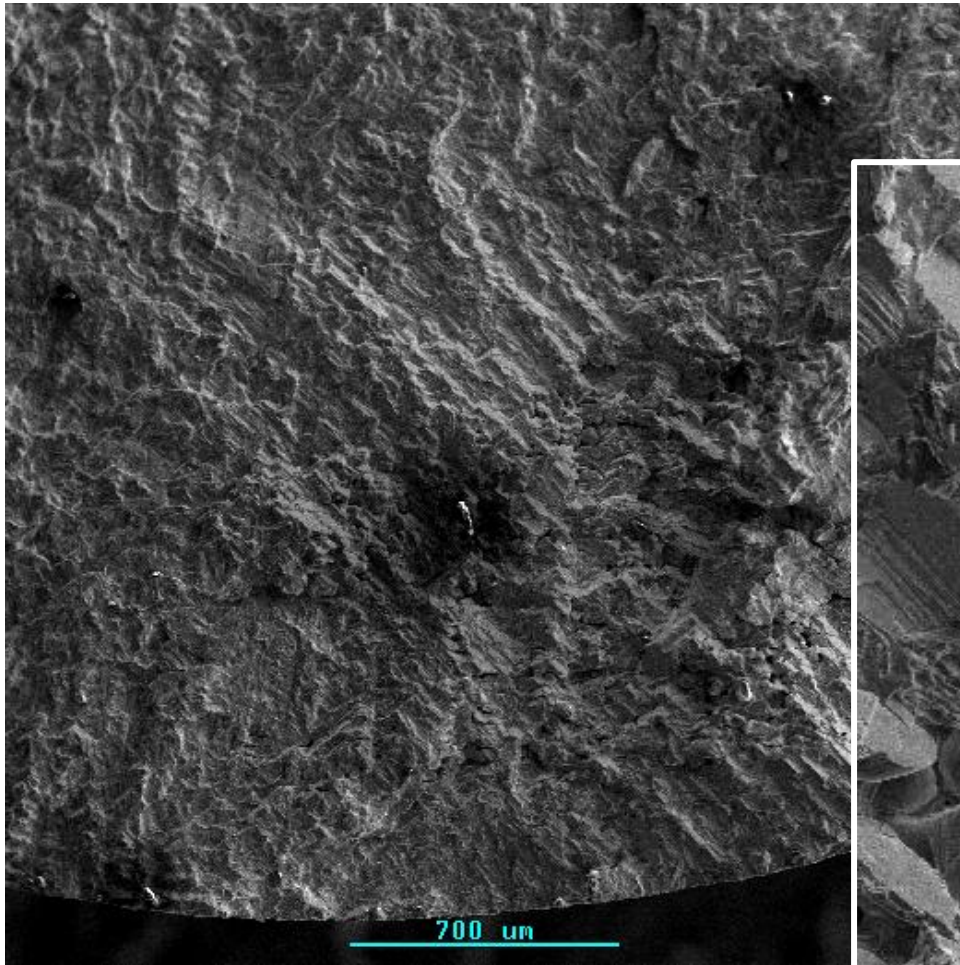

Fracture nucleation from a
shrinkage defect

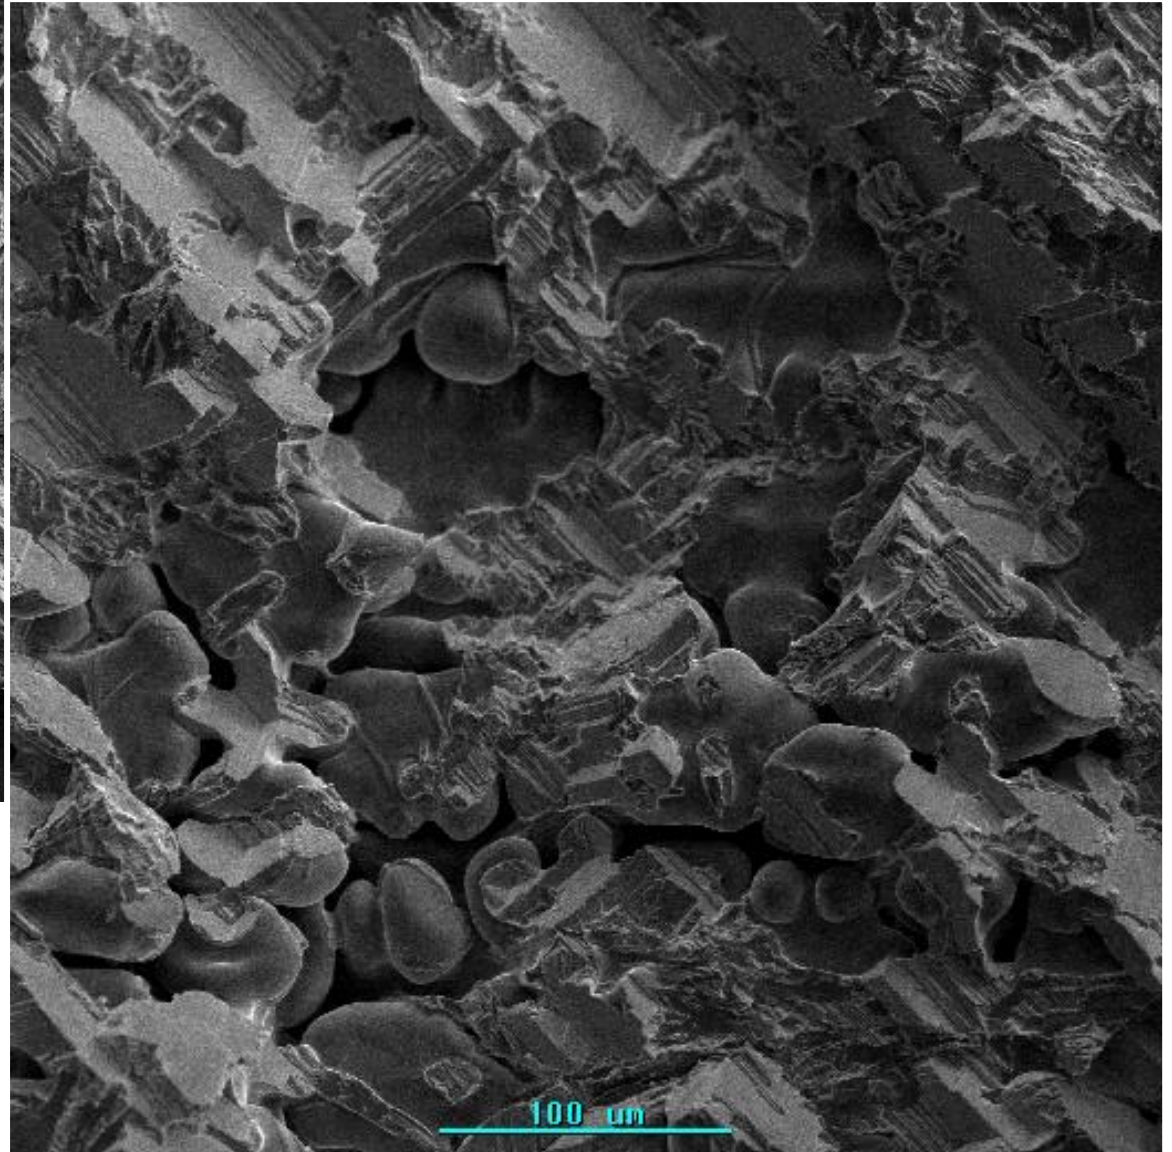


Fractography – cast sample fatigue test at 500 °C




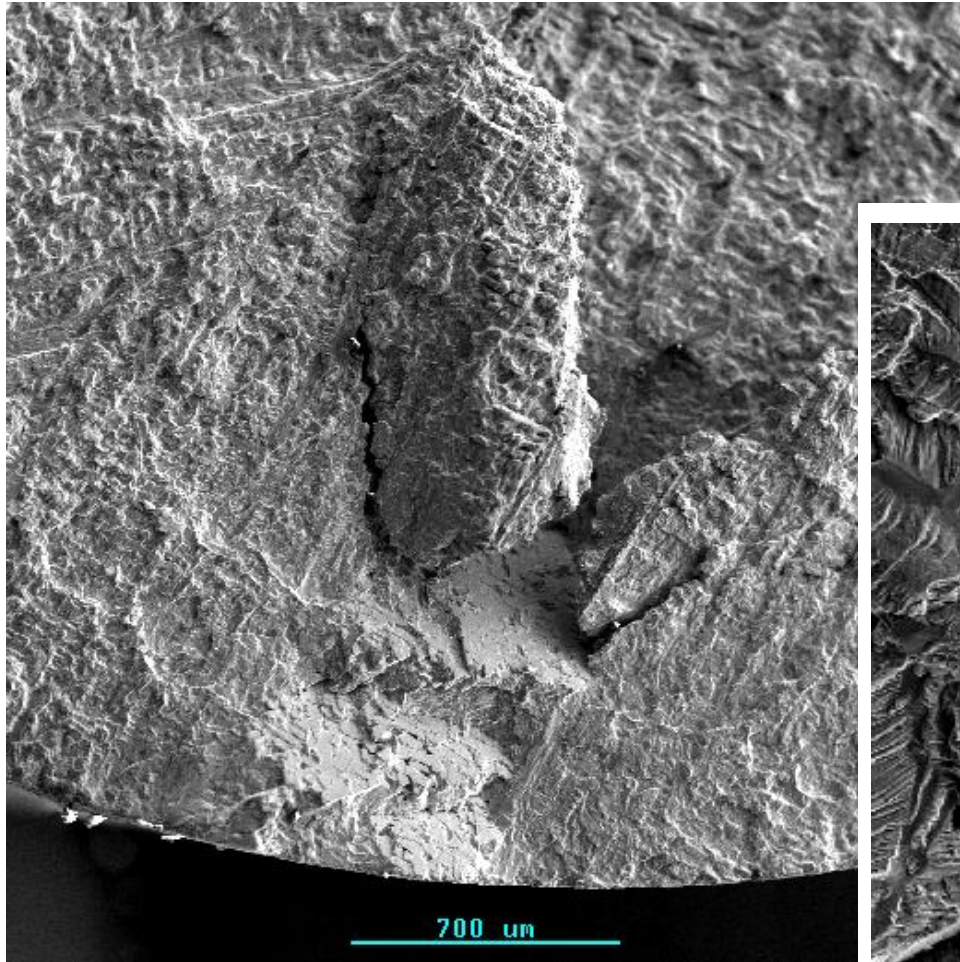


Nucleation and
propagation fatigue
fracture zones

detail of stair-step
fatigue propagation

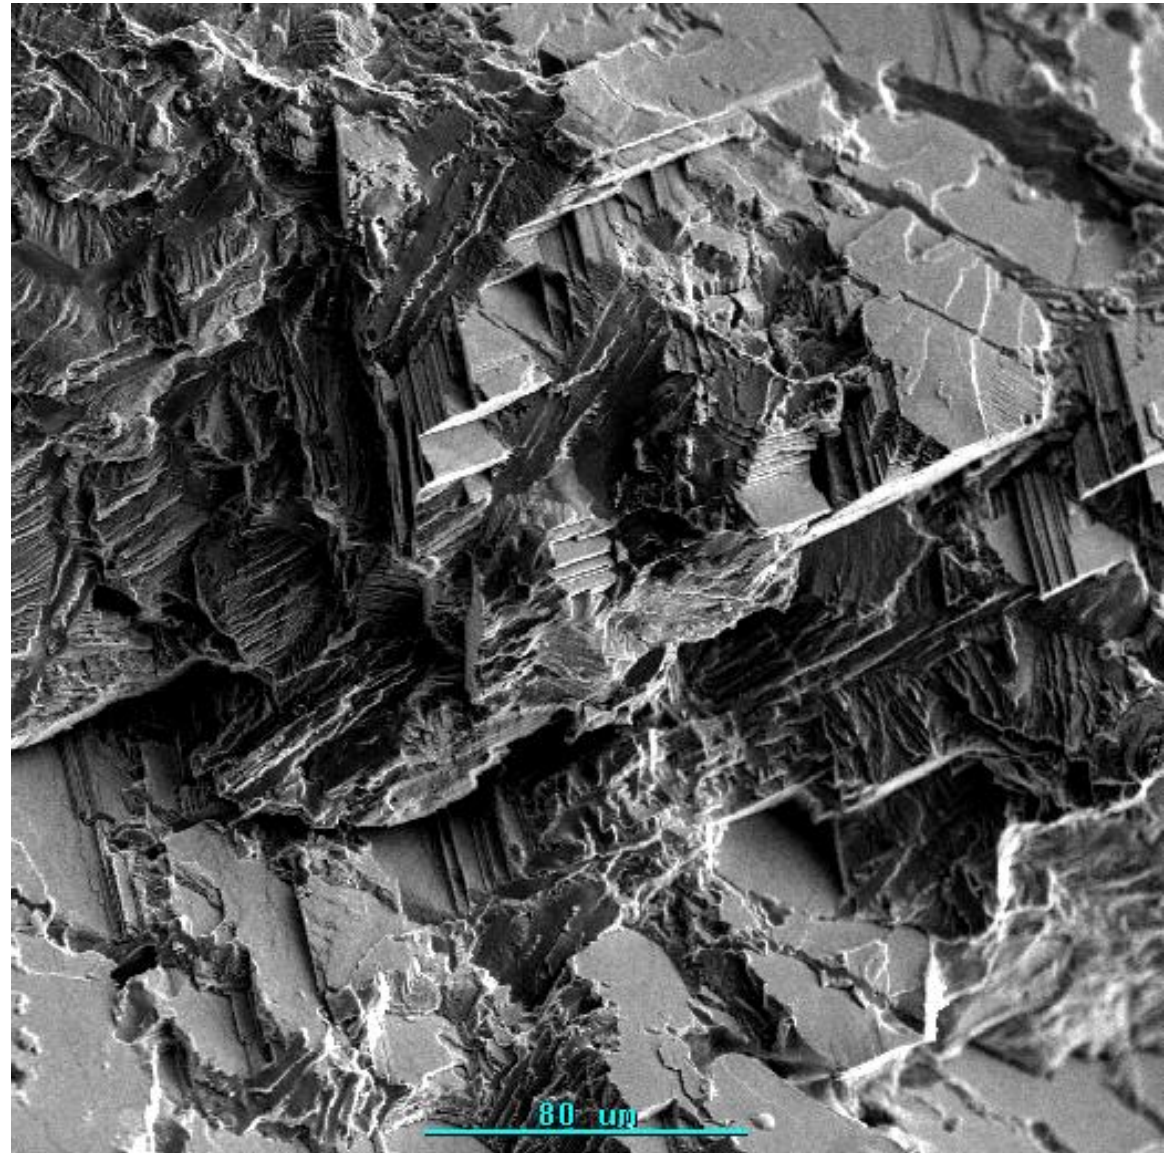

Fractography – HIP sample tensile test fracture at 500 C

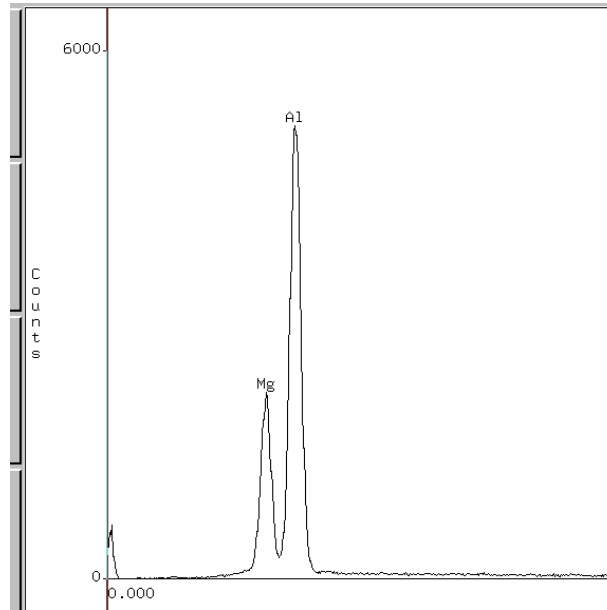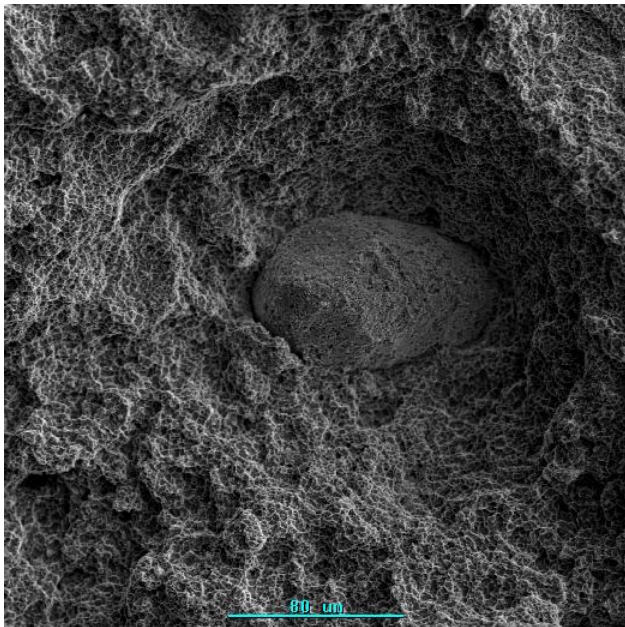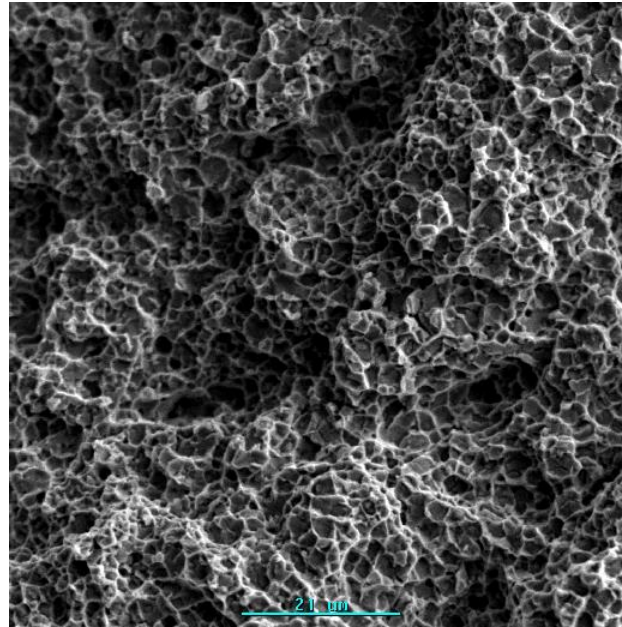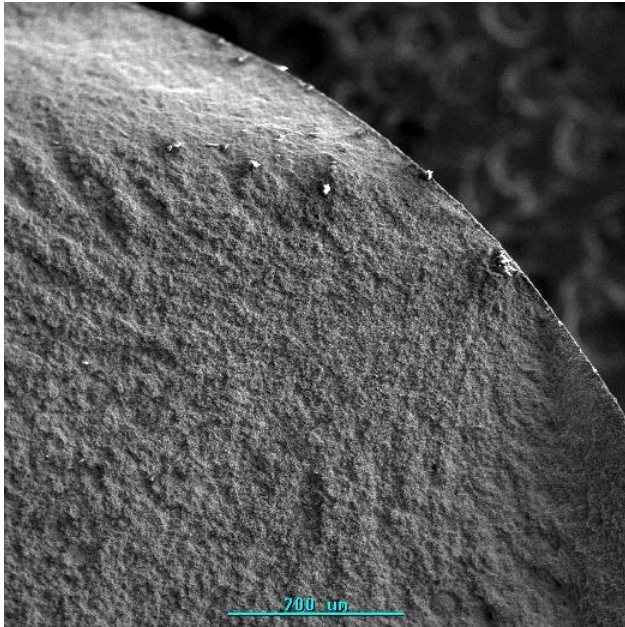




The fracture is ductile, nucleated by the presence of an inclusion

Fractography – hipped sample fatigue test at 500 °C



Fracture surface observed by means of Stereo Macro-scope.


The fatigue fracture is nucleated by the presence of a defect constituted by an Al-Mg oxide.

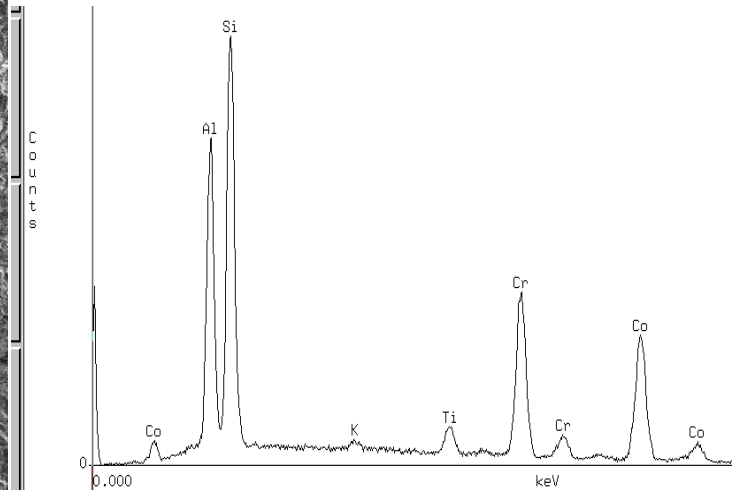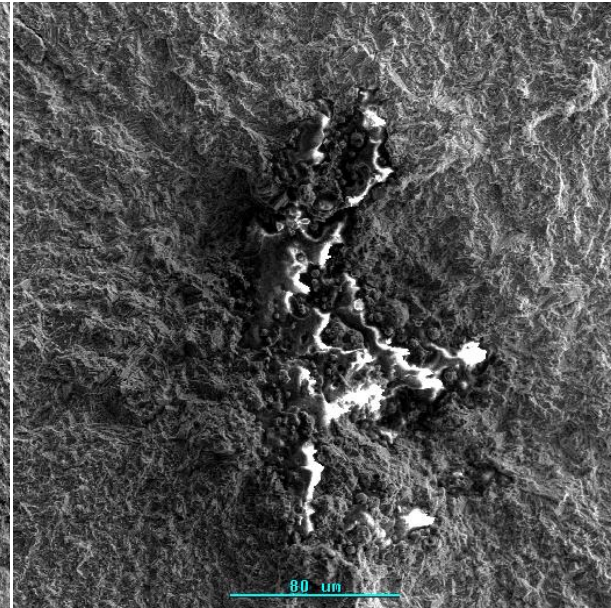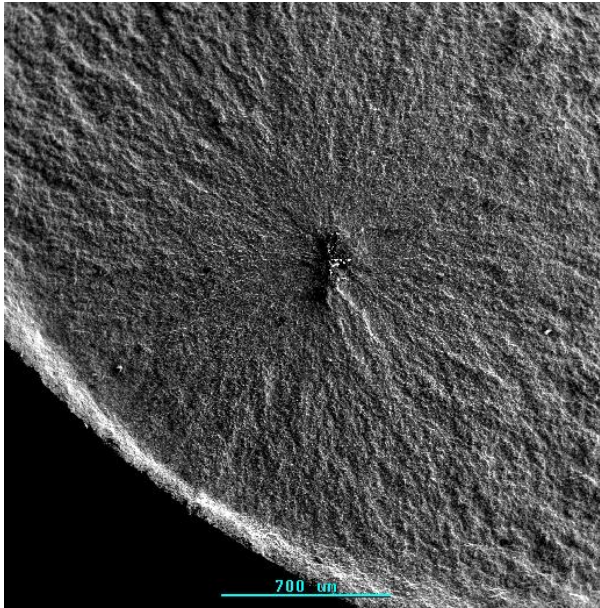


Nucleation zone (detail)

Defect EDS

Fractography – hipped sample fatigue test at 500 °C

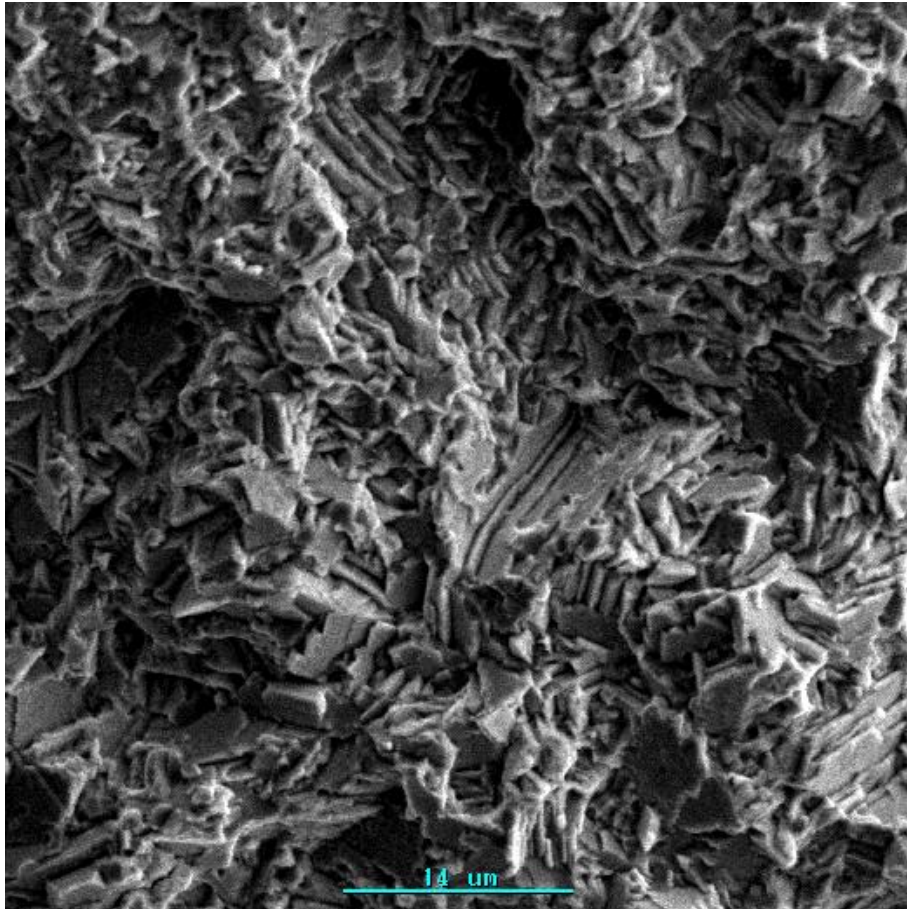

Fatigue propagation zone

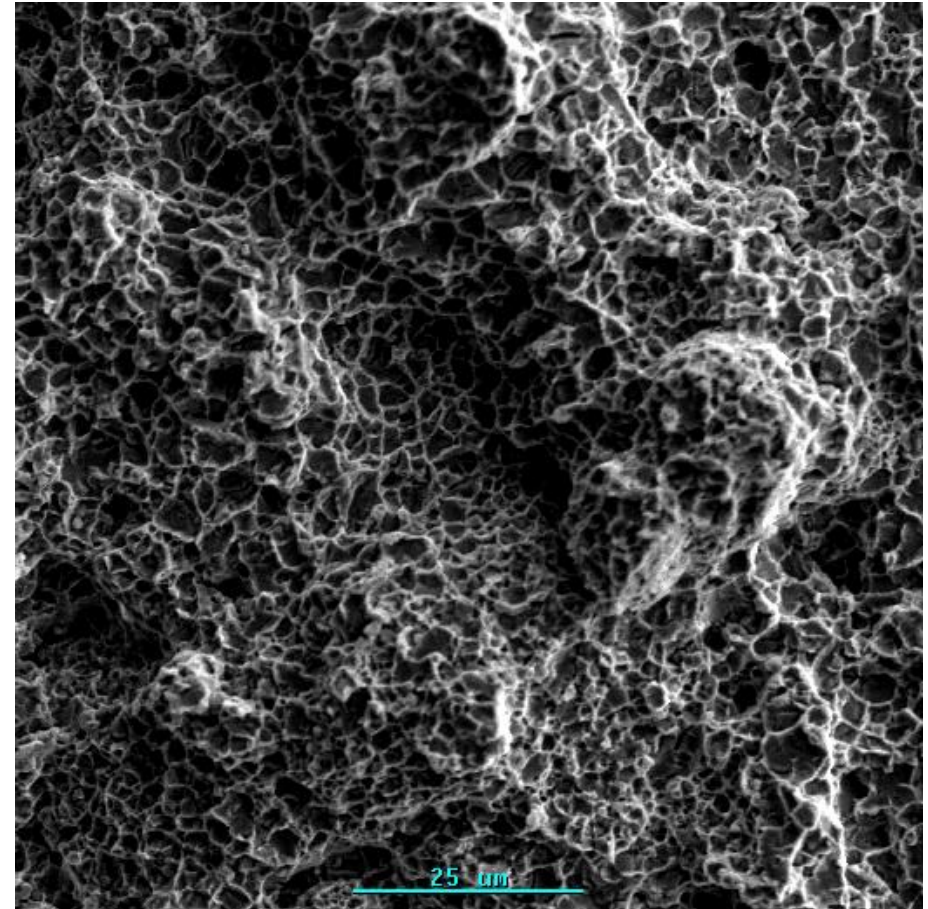

Final fracture zone characterized by ductile morphology


Discussion and conclusions (I/II)

- ★ Cast samples are constituted by cobalt rich primary dendrites and lamellar inter-dendritic zones (eutectic mixtures) with high carbides content.
- ★ Dendritic matrix is constituted by a solution of the alloying elements in CFC Co. EDS micro-analyses have evidenced two carbide types: one with high Cr content, the other with high W content.
- ★ Hipped samples present a Co rich matrix and dispersed carbides, about 2 μm diameter. Grain size is in the range of 5-40 μm with the most part in the range 5-10 μm .
- ★ XRD analyses have shown shallow and partially overlapped peaks (e.g. 40-65° range) with the probable prevalence of Co_{CFC} in respect to Co_{HCP} and the presence of mixed carbides. The cast sample show a phase evolution changing the test temperature, not observed for hipped samples.

Discussion and conclusions (II/II)


- ◆ The best performance both in tensile tests and in fatigue tests was observed for the hiped samples
- ◆ The effect of temperature on tensile and fatigue properties is limited; particularly, the observed fracture mechanisms do not change varying the temperature between 250 and 500 °C.
- ◆ In tensile test samples the fracture of cast samples is mainly inter-dendritic and only in some zones the fracture are completed by a quasi cleavage inter-dendritic fracture. In hiped samples the ductile mode fracture is nucleated by an inclusional defect.
- ◆ In fatigue tests, the crack of cast samples is nucleated by casting defects and propagates on crystallographic planes, in a trans-dendritic way, with a stair-step morphology. The crack of hiped samples is nucleated by an inclusion and the fracture is mainly ductile.

Fractography – tensile test fracture at 500 °C (II/II)

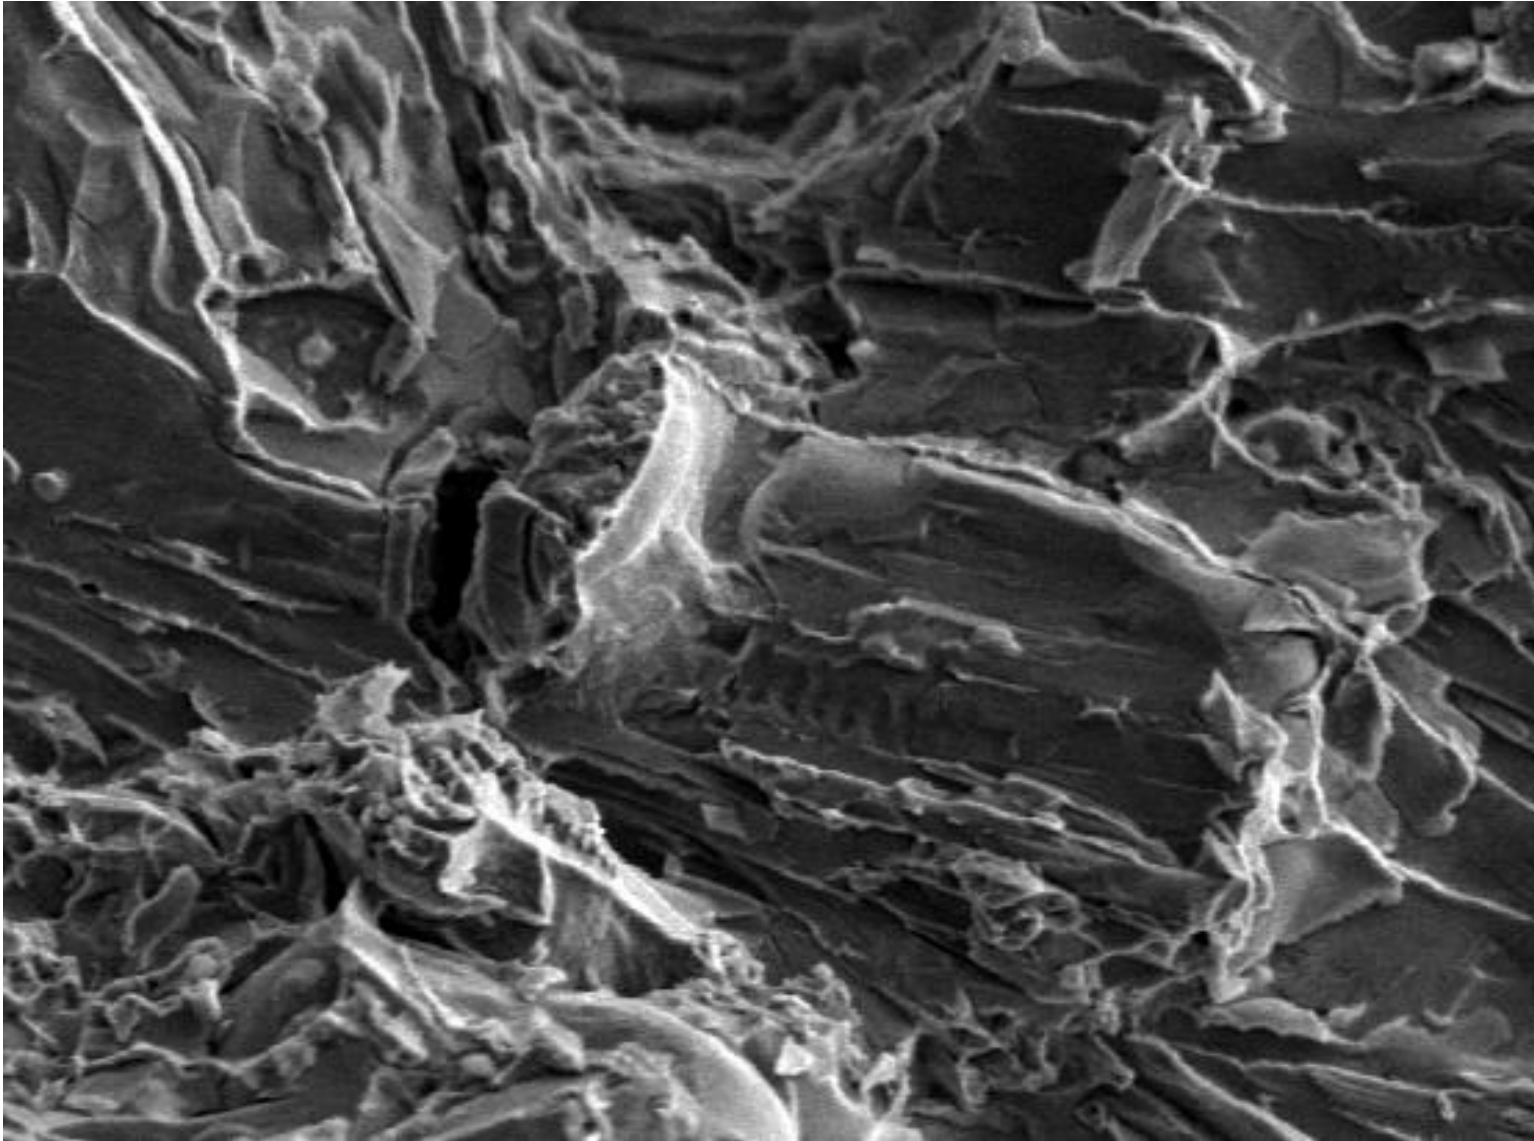

quasi-cleavage

Mechanical tests

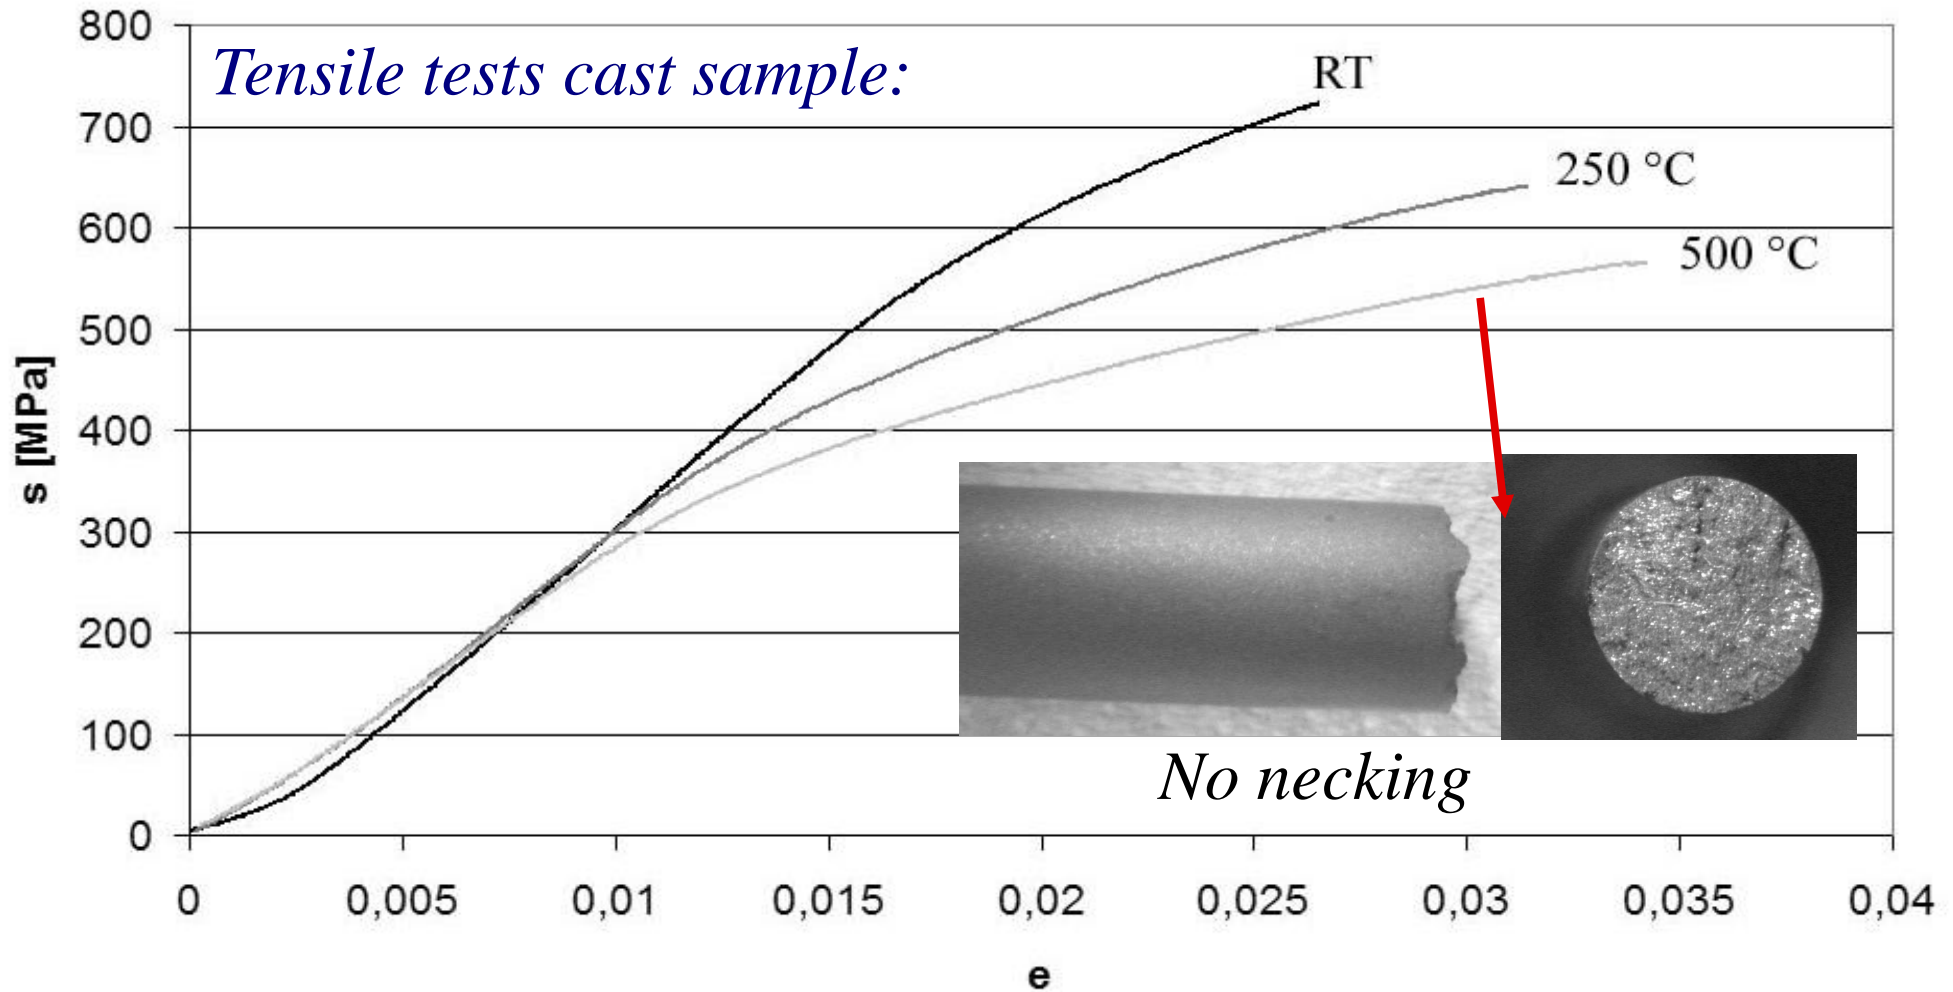

Fatigue tests:

- pulsed traction fatigue $R \approx 0$
- staircase method up to $2 \cdot 10^6$ cycles, 30 Hz, temperature 250 or 500 °C
- results obtained through 250 or 500 °C tests are similar

CAST Co-Alloy

pulsed traction fatigue tests ($R \approx 0$), up to $2 \cdot 10^6$ cycles, at **500 °C**

Strenght	Specimens results											Results	
Mpa	1	2	3	4	5	6	7	8	9	10	11	X	O
450	X											1	
440													
430													
420													
410		X		X								2	
400								X				1	
390			O		X		O		X		X	3	2
380										O			1
370						O							1

X: specimen broken before $2 \cdot 10^6$ cycles

O: specimen completes $2 \cdot 10^6$ cycles

CAST Co-Alloy

pulsed traction fatigue tests ($R \approx 0$), up to $2 \cdot 10^6$ cycles, at **250 °C**

Strenght	Specimens results											Results	
Mpa	1	2	3	4	5	6	7	8	9	10	11	X	O
450	X											1	
440													
430		X				X						2	
420													
410			X		O		X					2	1
400								X				1	
390				O					X		O	1	2
380										O			1

X: specimen broken before $2 \cdot 10^6$ cycles

O: specimen completes $2 \cdot 10^6$ cycles

HIP Co-alloy

pulsed traction fatigue tests ($R \approx 0$), up to $2 \cdot 10^6$ cycles, at **500 °C**

Strenght	Specimens results											Results	
Mpa	1	2	3	4	5	6	7	8	9	10	11	X	O
740	X											1	
720													
700		X										1	
680				X		O						1	1
660			O		O								2

X: specimen broken before $2 \cdot 10^6$ cycles

O: specimen completes $2 \cdot 10^6$ cycles