



POLITECNICO DI TORINO  
Repository ISTITUZIONALE

Insights on a methanation catalyst aging process: Aging characterization and kinetic study

*Original*

Insights on a methanation catalyst aging process: Aging characterization and kinetic study / Morosanu, E. A.; Salomone, F.; Pirone, R.; Bensaid, S.. - In: CATALYSTS. - ISSN 2073-4344. - ELETTRONICO. - 10:3(2020), p. 283.

*Availability:*

This version is available at: 11583/2844079 since: 2020-09-04T11:31:20Z

*Publisher:*

MDPI AG

*Published*

DOI:10.3390/catal10030283

*Terms of use:*

openAccess

This article is made available under terms and conditions as specified in the corresponding bibliographic description in the repository

*Publisher copyright*

(Article begins on next page)


# Insights on a methanation catalyst aging process: aging characterization and kinetic study

Eduard Alexandru Morosanu, Fabio Salomone, Raffaele Pirone and Samir Bensaid\*


Department of Applied Science and Technology (DISAT), Politecnico di Torino, Corso Duca degli Abruzzi 24, 10129 Torino, Italy

\* Correspondence: samir.bensaid@polito.it

## Supporting information

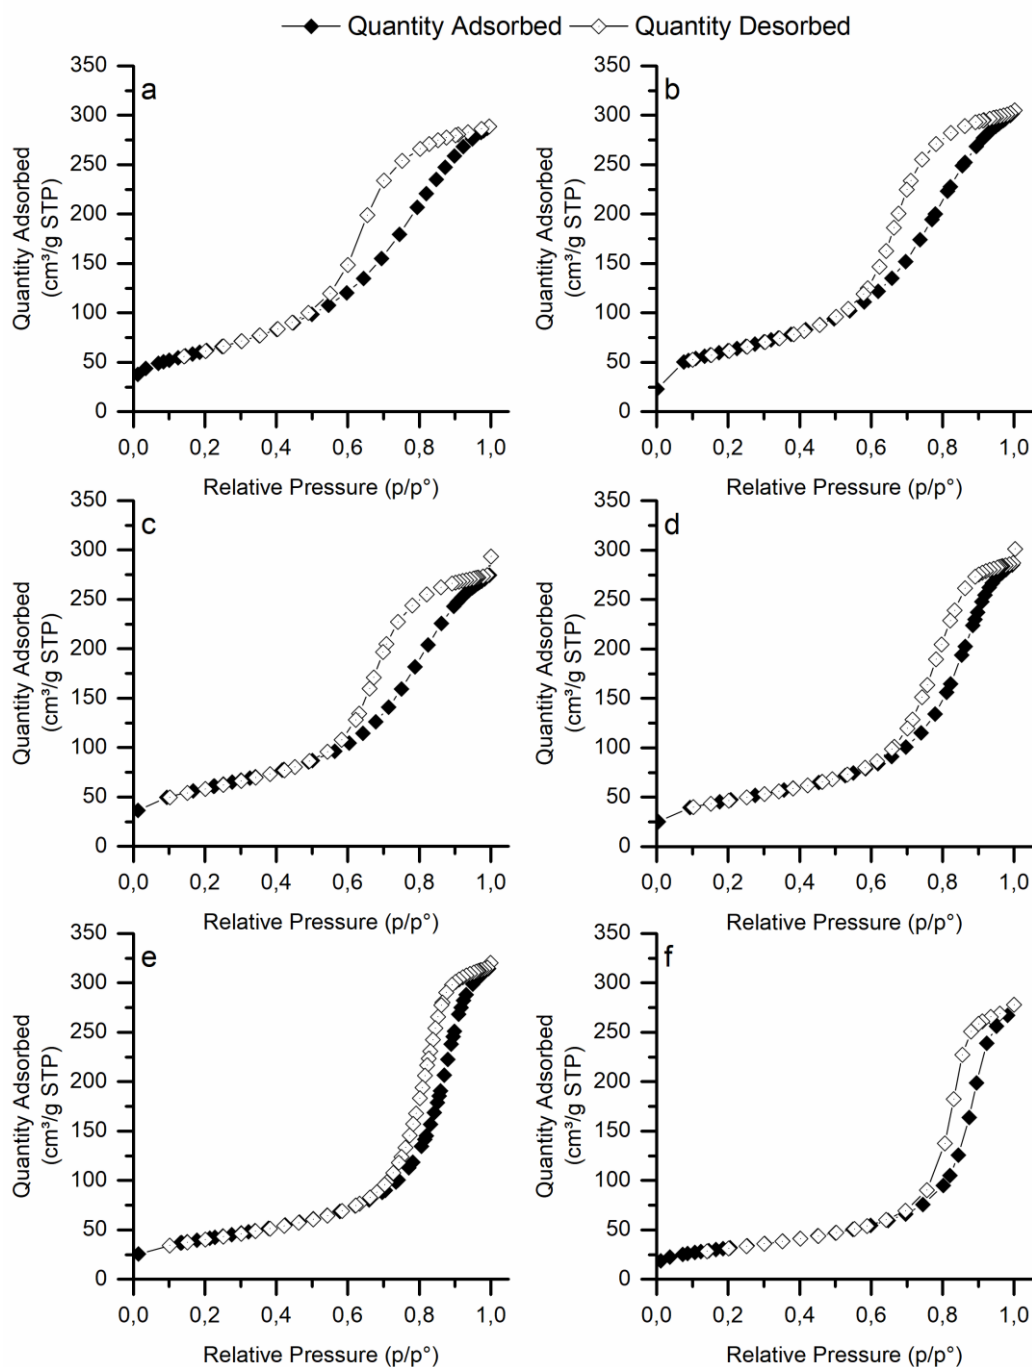


**Figure S-1:** Nitrogen adsorption isotherms for the a) fresh sample, b) fresh reduced, c) aged @ 270°C, d) aged @ 380°C, e) aged @ 425°C and f) aged @ 500°C

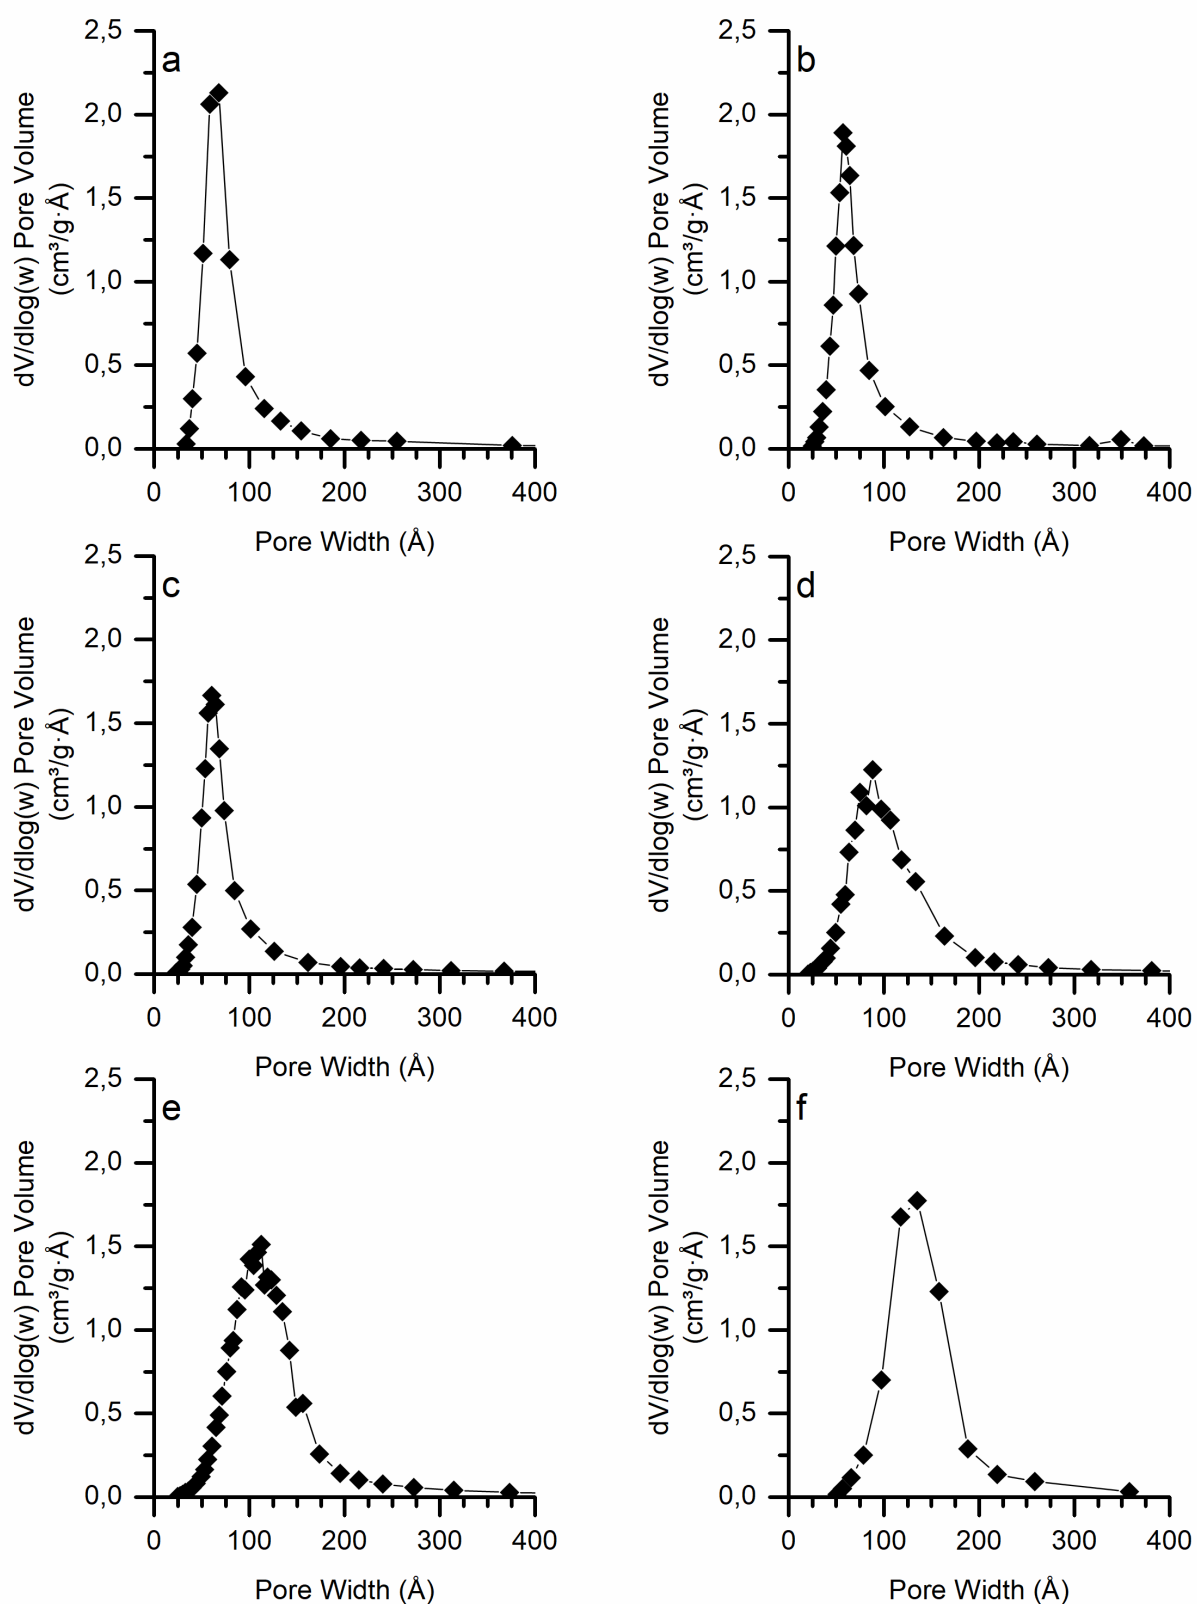

**Figure S-2:** BJH desorption pore-size distribution curves for the a) fresh sample, b) fresh reduced, c) aged @ 270°C, d) aged @ 380°C, e) aged @ 425°C and f) aged @ 500°C

The reducibility of the catalyst was investigated using a hydrogen temperature programmed reduction technique (H<sub>2</sub>-TPR). The tests were performed in a homemade setup. A 200 mg fresh catalyst sample was loaded into a U-shaped quartz tube reactor with an internal diameter of 4 mm. The reactor was then placed into temperature-controlled oven. The H<sub>2</sub>-TPR was performed with a 200 ml/min gas mixture containing 5% of H<sub>2</sub> in N<sub>2</sub> and with a heating rate of 5°C/min up to 800°C. Hydrogen consumption was monitored using a multi-channel Emerson X-Stream gas analyser equipped with non-dispersive infrared (NDIR) sensors for CO, CO<sub>2</sub> and CH<sub>4</sub>, a thermal conductivity (TCD) detector for H<sub>2</sub> and a paramagnetic sensor for O<sub>2</sub> measurement. The temperature was recorded using a thermocouple placed within the catalyst bed.


In Figure S-3 the hydrogen concentration variation is reported. The reduction peaks characterize the metal-support interaction[27,28]. The deconvolution of the TPR profile has allowed to identify the presence of three reduction peaks ( $R^2 \geq 0.99$ ). A big reduction peak was observed at around 290°C. This peak can be assigned to the reduction of surface amorphous NiO and bulk NiO. Two more peaks were identified at 445 °C and 492 °C that can be assigned to NiO weakly and strongly interacting with the Al<sub>2</sub>O<sub>3</sub> support. The activation temperature of 260°C that is used in the real plant will only reduce part of the NiO. About 22% of the total hydrogen uptake takes place during the activation procedure. This corresponds to the same fraction of reduced nickel.

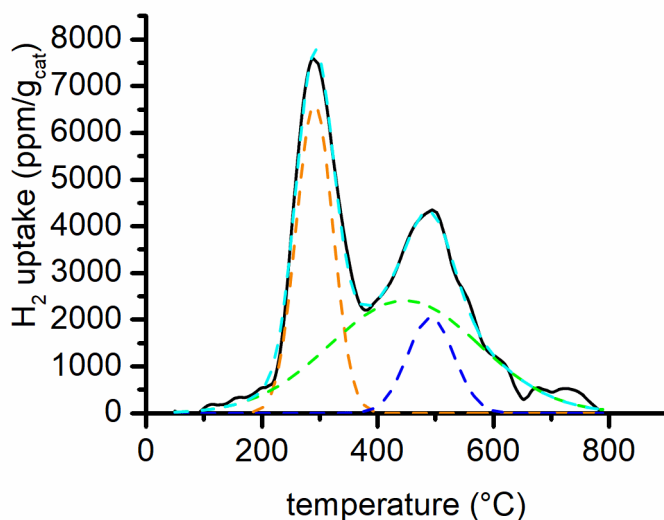


**Figure S-3:** H<sub>2</sub>-TPR with peak deconvolution

The CO<sub>2</sub> adsorption capacity of the catalyst was investigated by performing a CO<sub>2</sub>-TPD. The same apparatus used for the TPR analysis was employed also for the TPD. A 200 mg sample of catalyst was reduced in situ at 400°C prior to the analysis. The sample was then saturated with carbon dioxide at room temperature under continuous flow (100 ml/min, 10% CO<sub>2</sub> in nitrogen) for one hour. After cleaning the sample for 30 minutes under nitrogen flow the desorption was started. A heating rate of 10°C/min and a 200 ml/min of N<sub>2</sub> were used during the desorption.

In Figure S-4 the CO<sub>2</sub> concentration evolution is reported. Most of the adsorbed CO<sub>2</sub> is released at temperature below 350°C. This result was useful for the identification of the catalyst samples pre-treatment procedure before the TPO analysis. The TPO procedure is illustrated in Figure S-5.

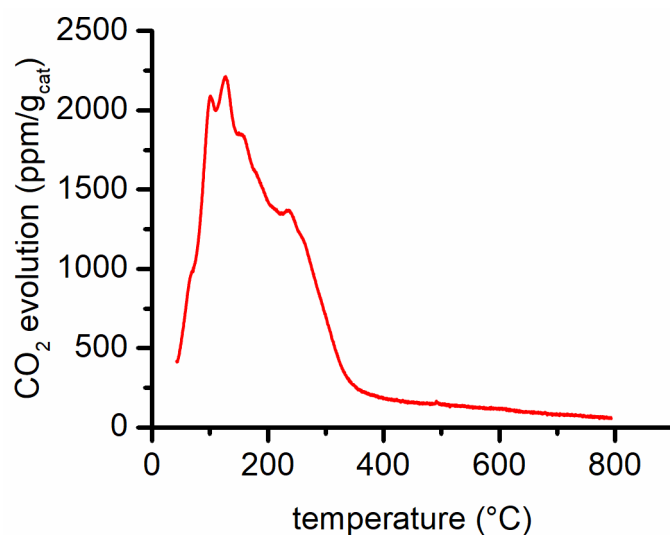

**Figure S-4:** CO<sub>2</sub> evolution during TPD analysis

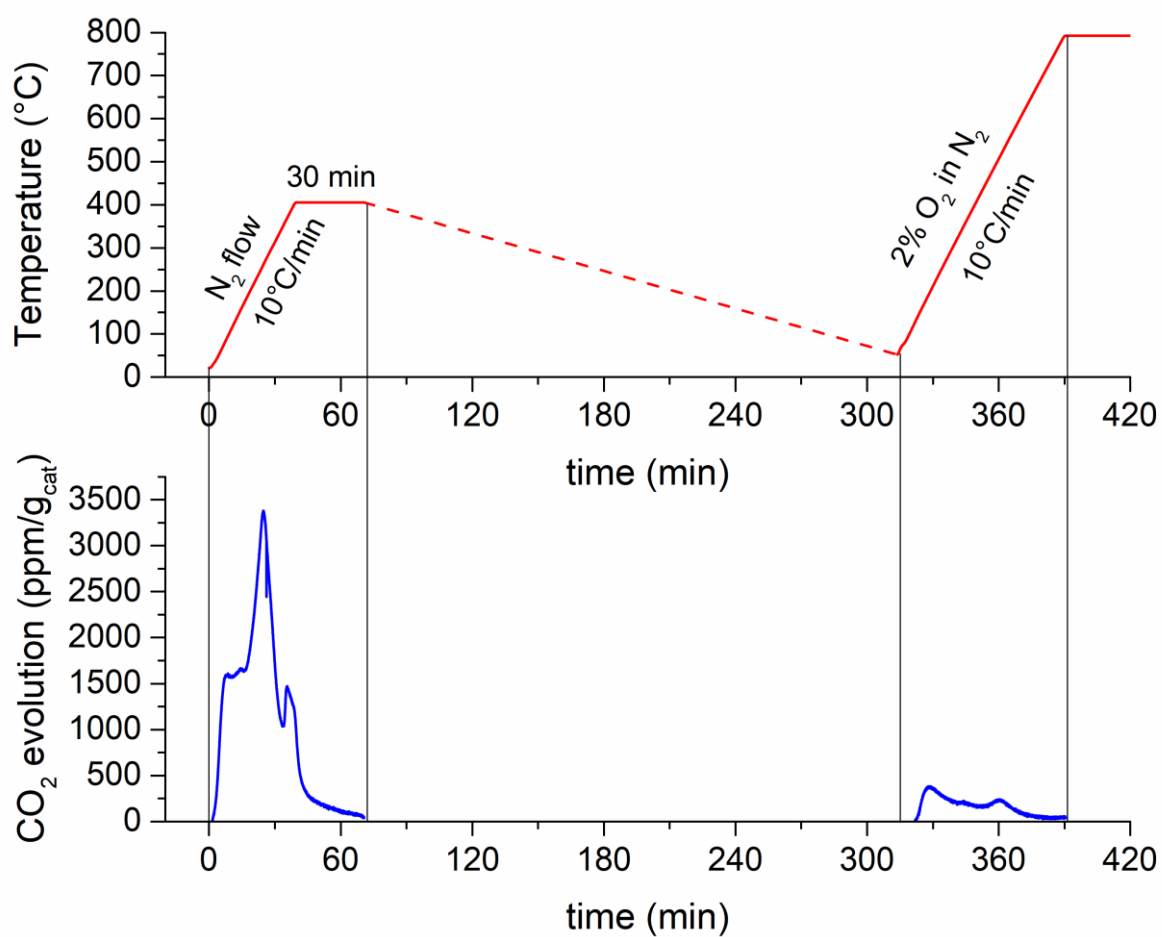

**Figure S-5:** CO<sub>2</sub> evolution during TPD analysis